



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer
and the Scroll Saw Key Chain Printer



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.


Remote Home



Study the picture for assembly details.



The dowels are mostly decorative and could be left out. I drilled the holes in the side walls before assembly. After glueing the project together I drilled the holes 1/4" deeper and inserted the dowels. They were sanded flush.

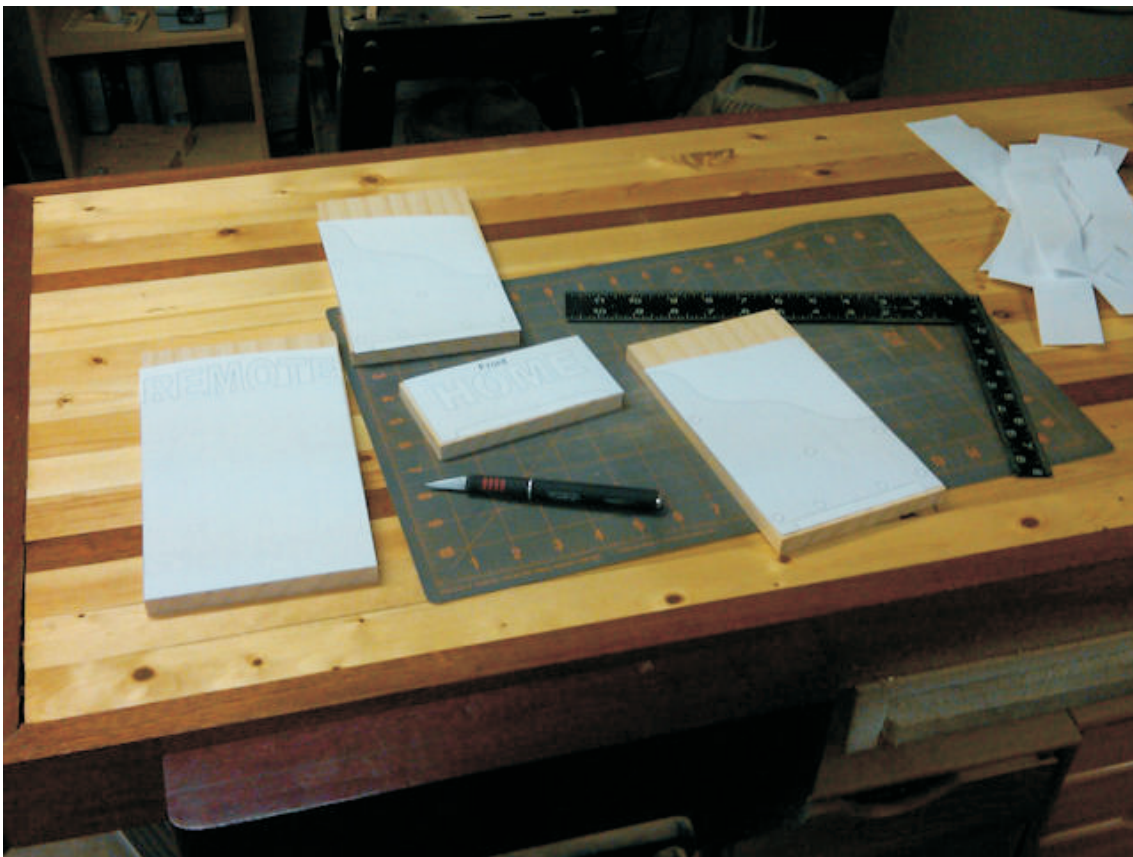

For an accurate assemble all the pieces were cut to size before the pattern was applied.

Notice that the project was glued together before the dowels were installed.




REMOTE

**½" Thick
Back**

Use 1/4" Dowels cut to 3/4" long
to pin the sides together.



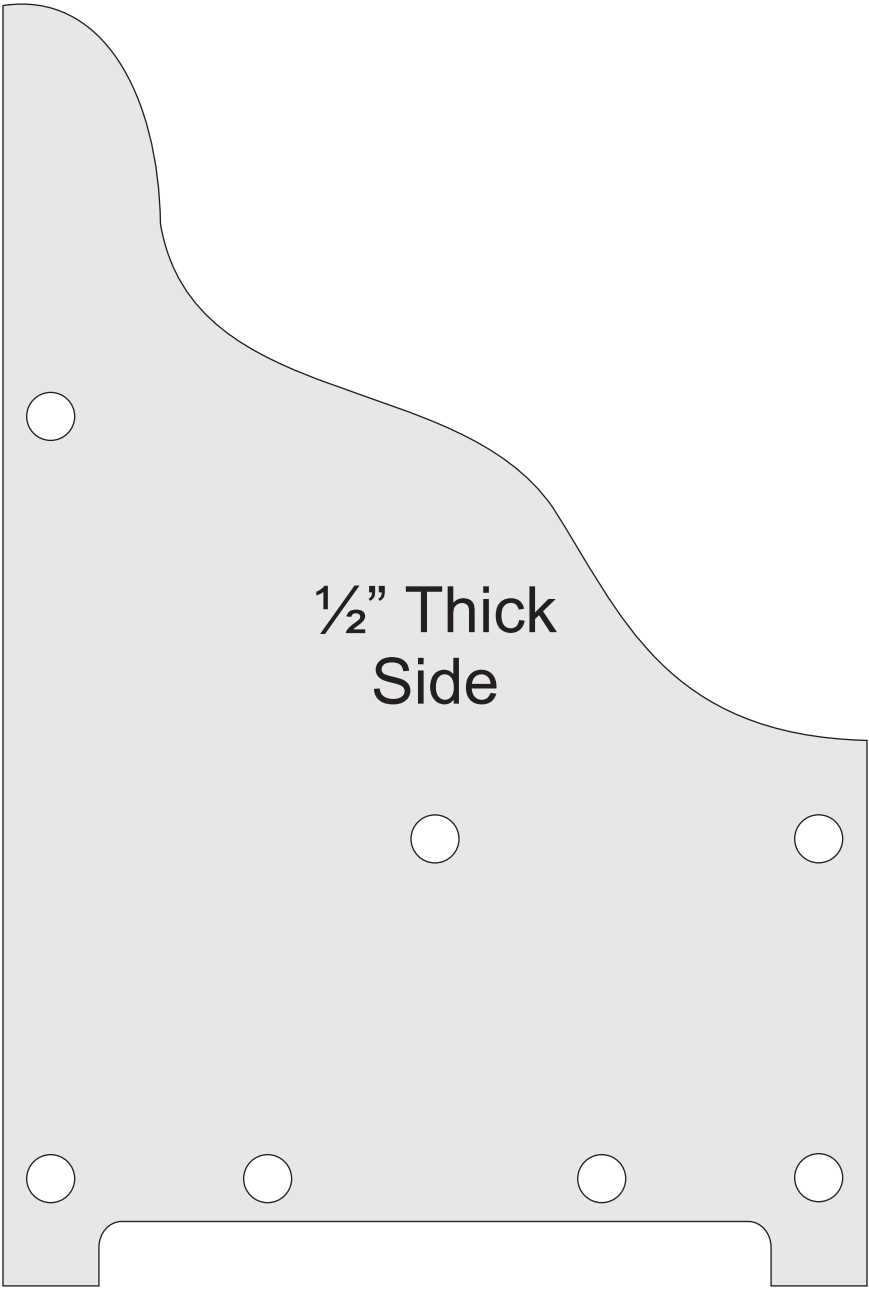

1/2" Thick
Side

5" x 3 1/2"

Base

5" x 3 1/4"

Divider

5" x 2 3/4" Front

HOME

1/2" Thick