

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.


steve@stevedgood.com

Copyright Steve Good 2015

Small Round Vase





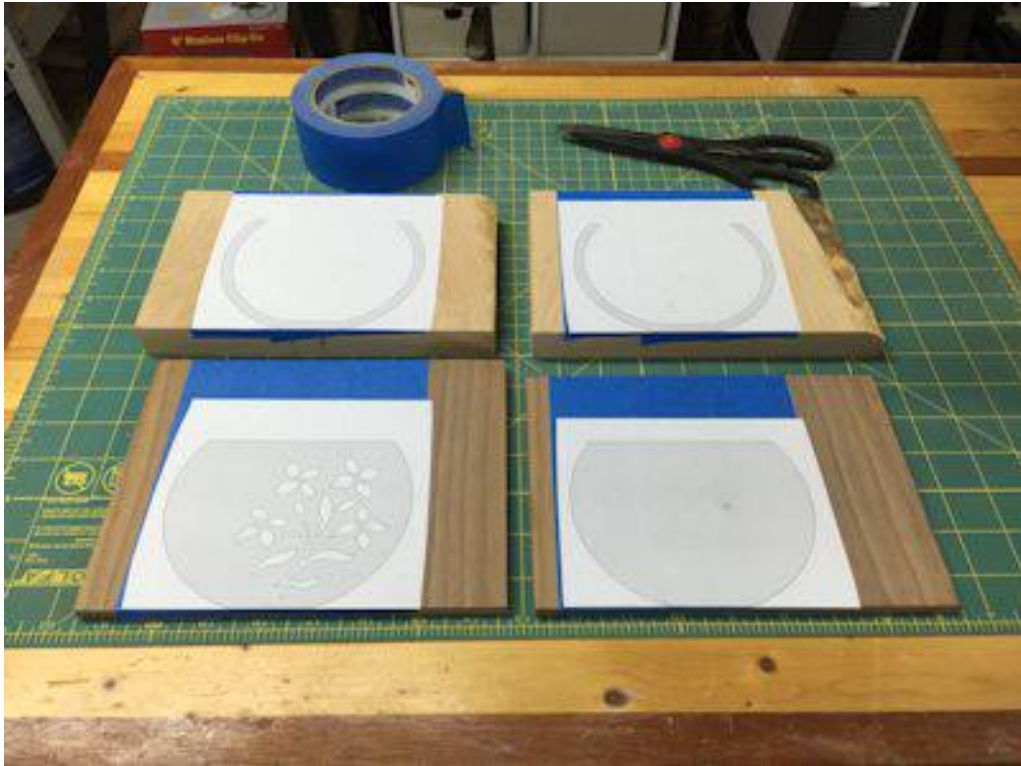

Apply the patterns to the wood blank.

Drill the interior entry holes on the front piece.





All the interior holes are drilled.

Cut the center parts of the vase first.





Glue the two center parts together and clamp.

Try to glue them up as flush as possible. We will sand them flush at the end.






While the center parts cure you can cut the front and back.

Sand the center parts flush




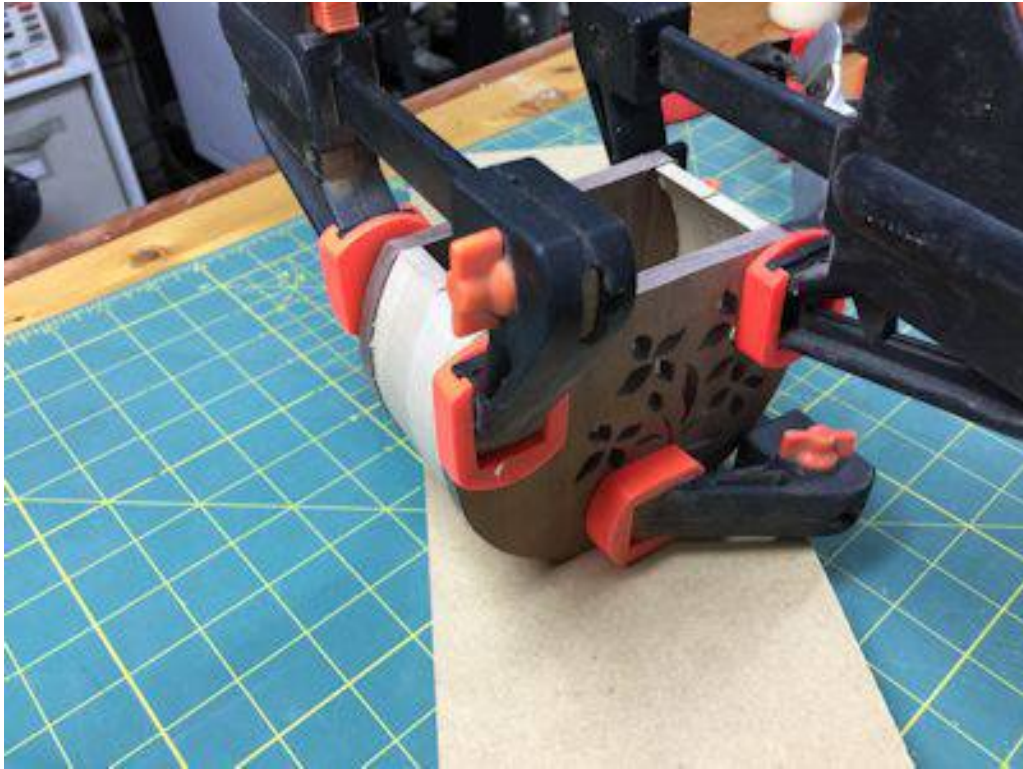

Glue the front and back to the center glue-up.

After the glue cures sand everything flush.



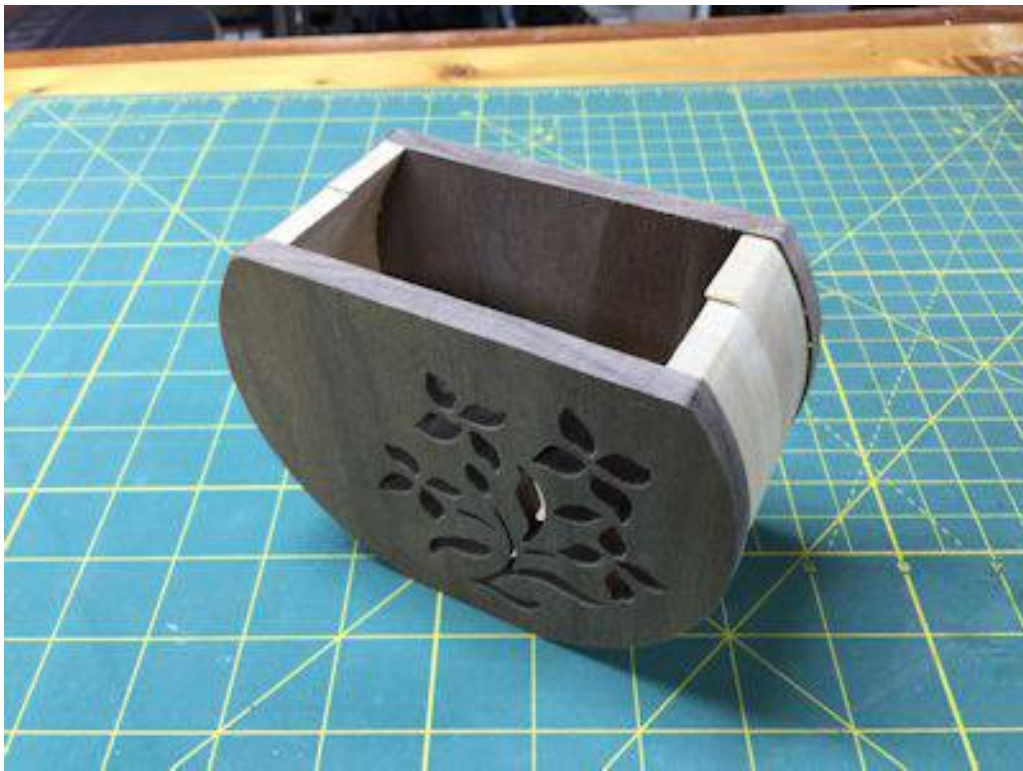


you can see the difference after everything is sanded.

Take your time and get it sanded well.



Round-over all both sides. I did not round-over the bottom.




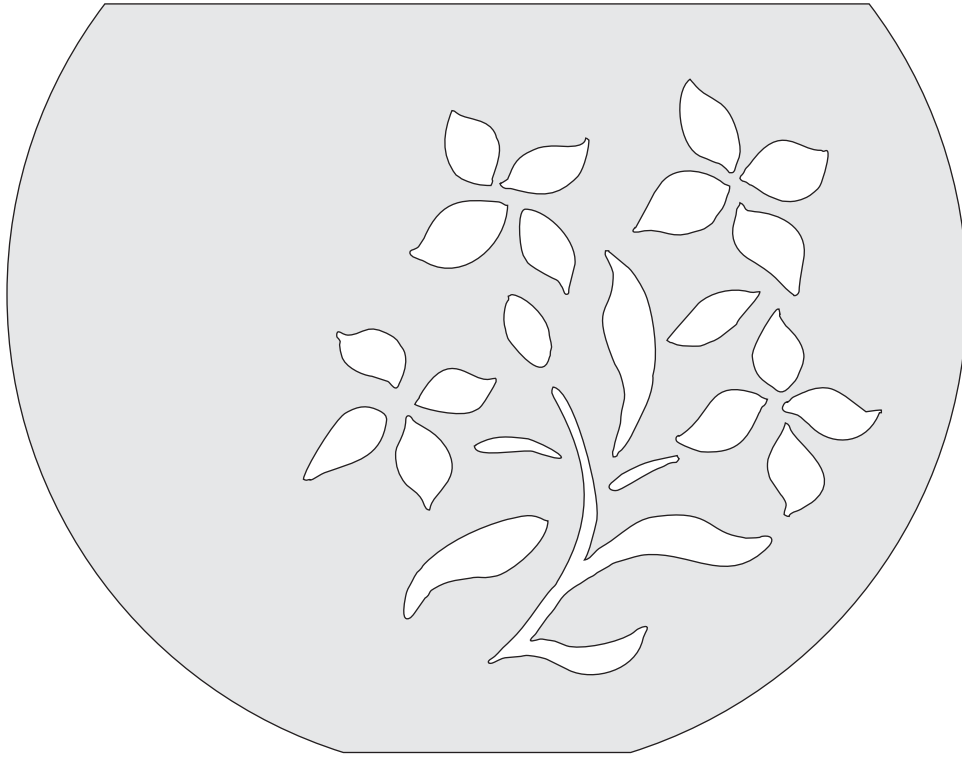

1/4" Thick



1" Thick

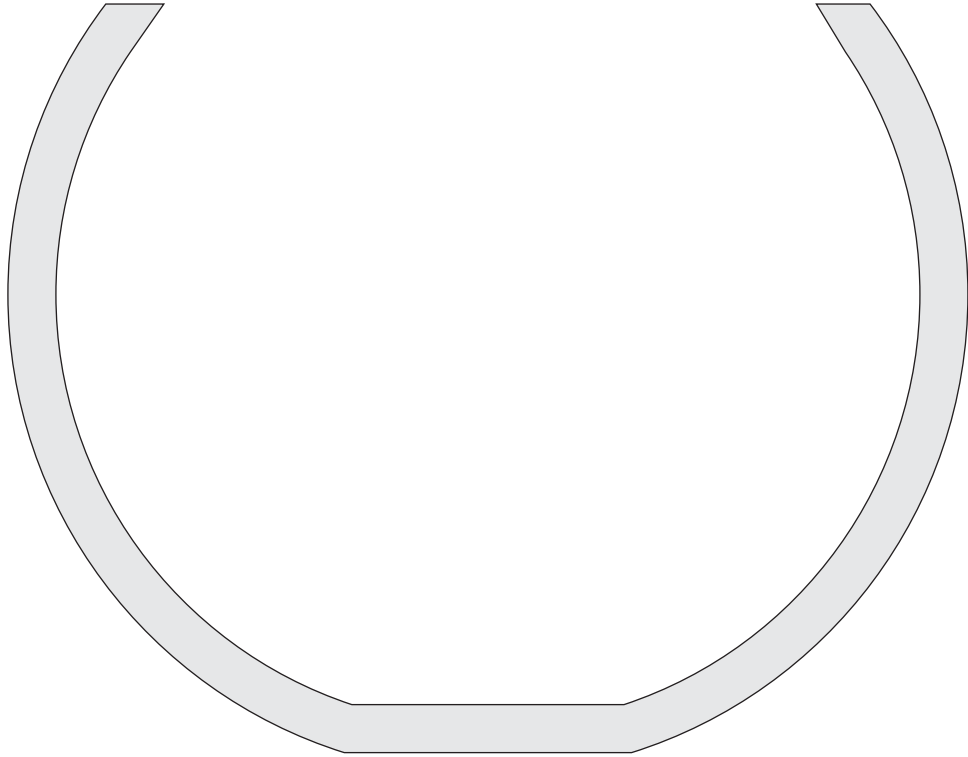

If you are comfortable cutting very thick wood
then you can cut one center section from 2"
thick wood.

