

# SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

## Digital Patterns

Designed by Steve Good




Hundreds of free Patterns  
Stencil Printer  
Jigsaw Puzzle Templates  
DVD's  
Key Chain Pattern Printer  
Video Tutorials  
Reviews  
Community Forum and more.



Kitchen, Garden or Shop Scoop.



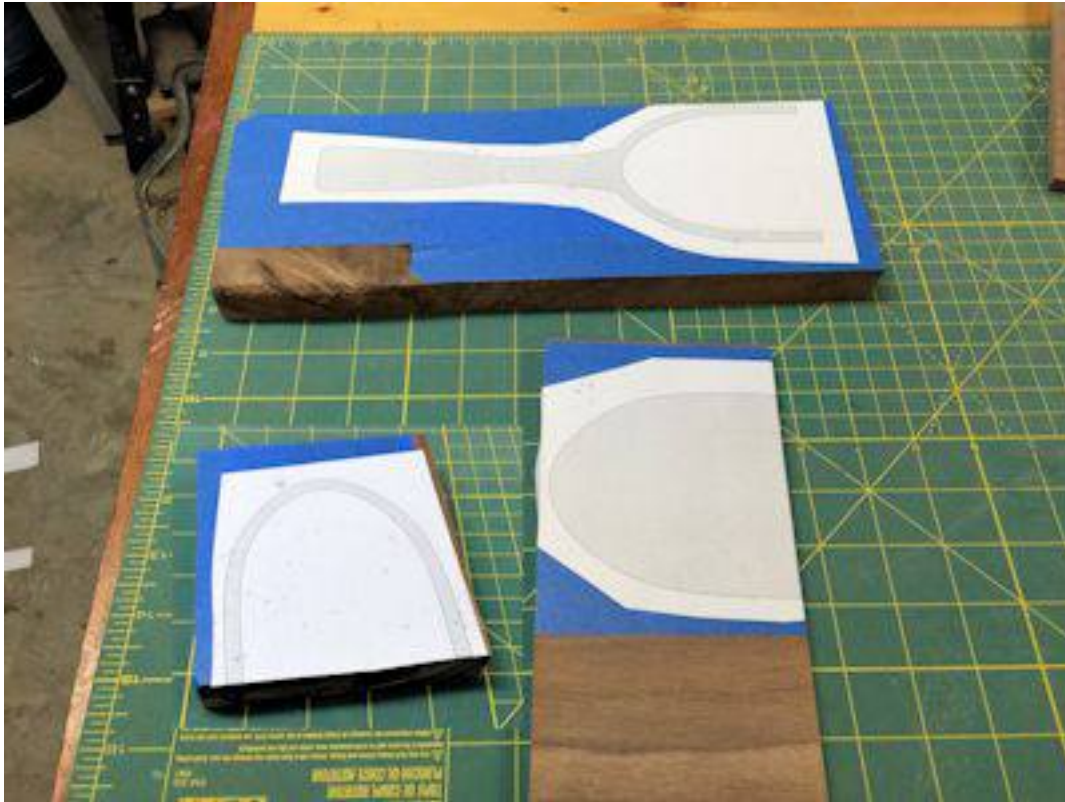

You will need 3/4" and 1/4" thick stock. Prepare the blanks with the patterns. Carefully cut all three parts.





Route a 1/4" round over on the handle. Use the guide line on the pattern to begin the round over. If you don't have a router then sand it smooth.  
Glue the middle section to the scoop. Sand it flush to the scoop handle.





Glue the bottom to the scoop and sand it flush.

Sand the slope on the front of the scoop.





Sand a bevel on the bottom of the scoop to make it more efficient.






Use a 1/4" round over bit around the bottom of the scoop.

Do your finish sanding and contour all the curves into the handle. Finish the scoop with your favorite clear finish.



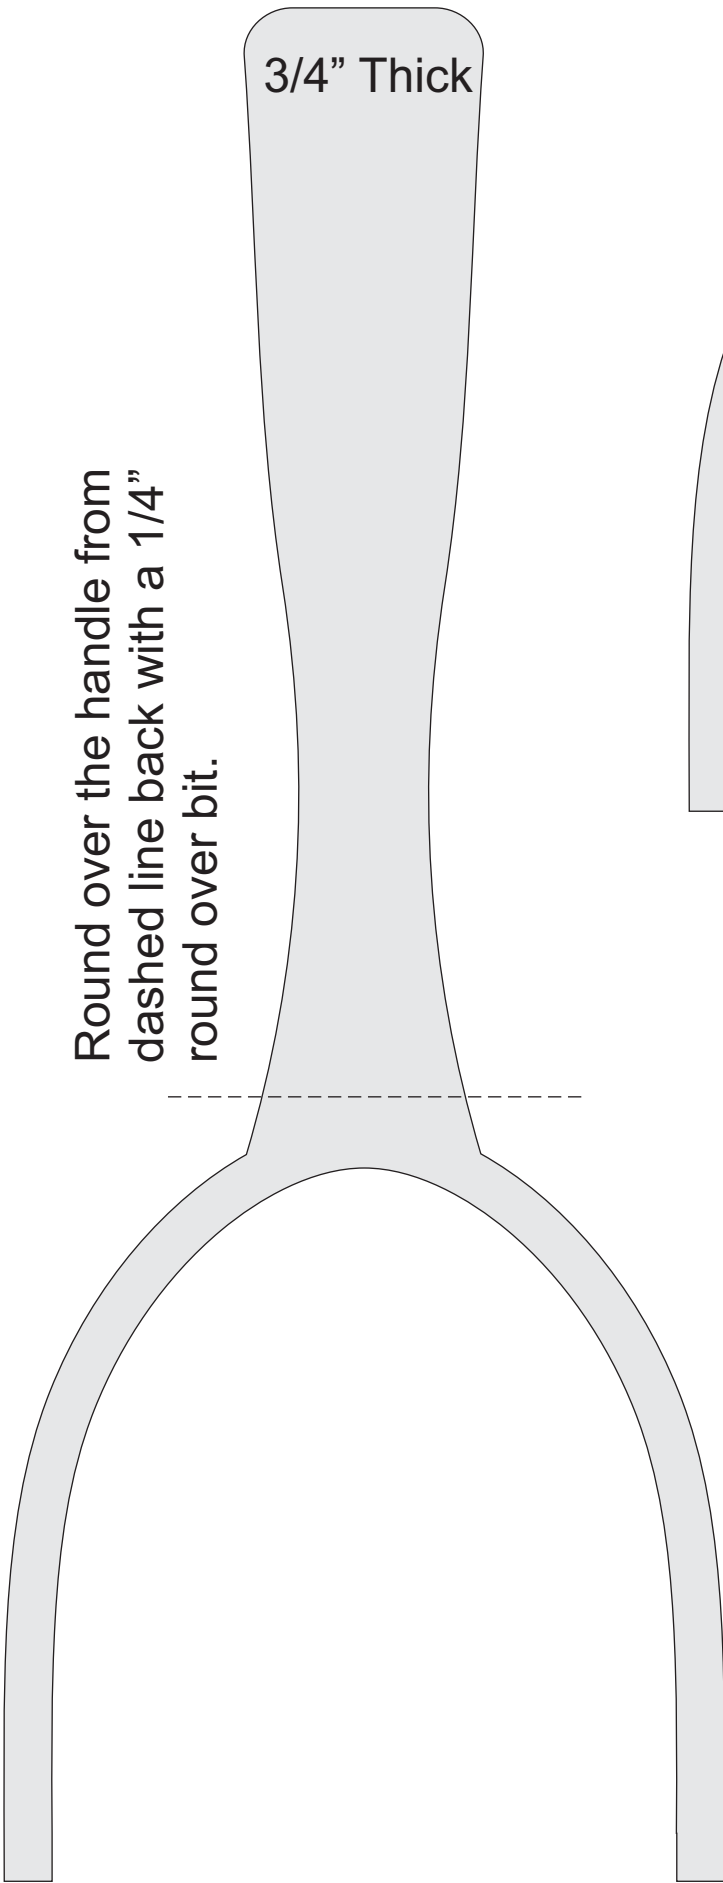

Round over the handle from  
dashed line back with a 1/4"  
round over bit.

