



Proud SAW Member

# Digital Patterns

Designed by  
Steve Good

[www.scrollsawworkshop.blogspot.com](http://www.scrollsawworkshop.blogspot.com)

Home of Scroll Saw Pattern Printer



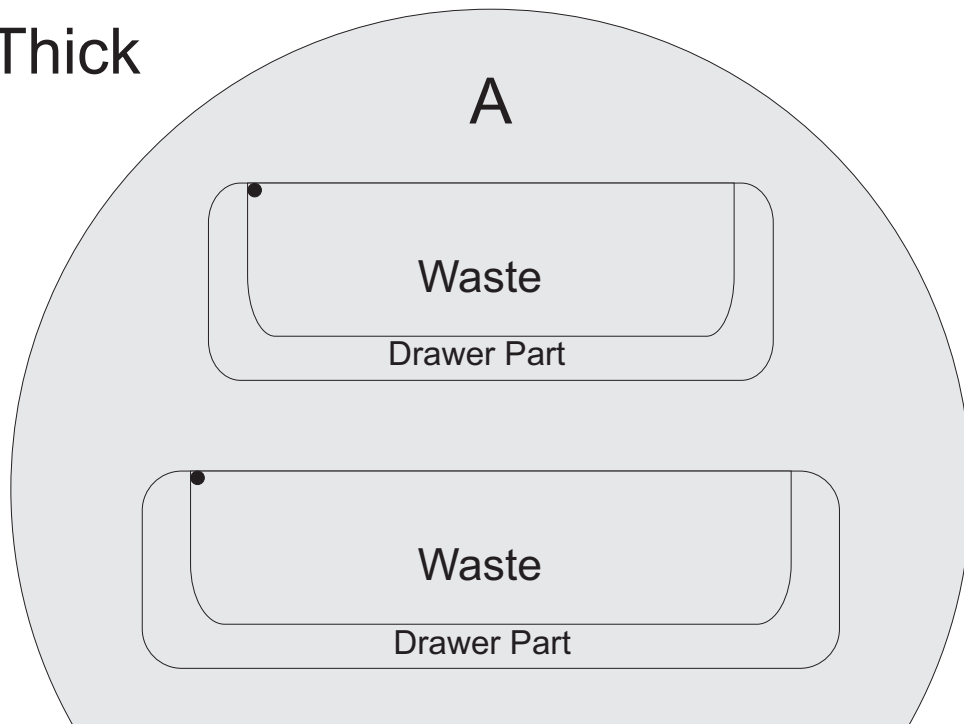


Figure 1




When you are finished with parts A, B and C you will have three of each of the parts in Figure 1.


3/4" to 1" Thick



B and C on next page.

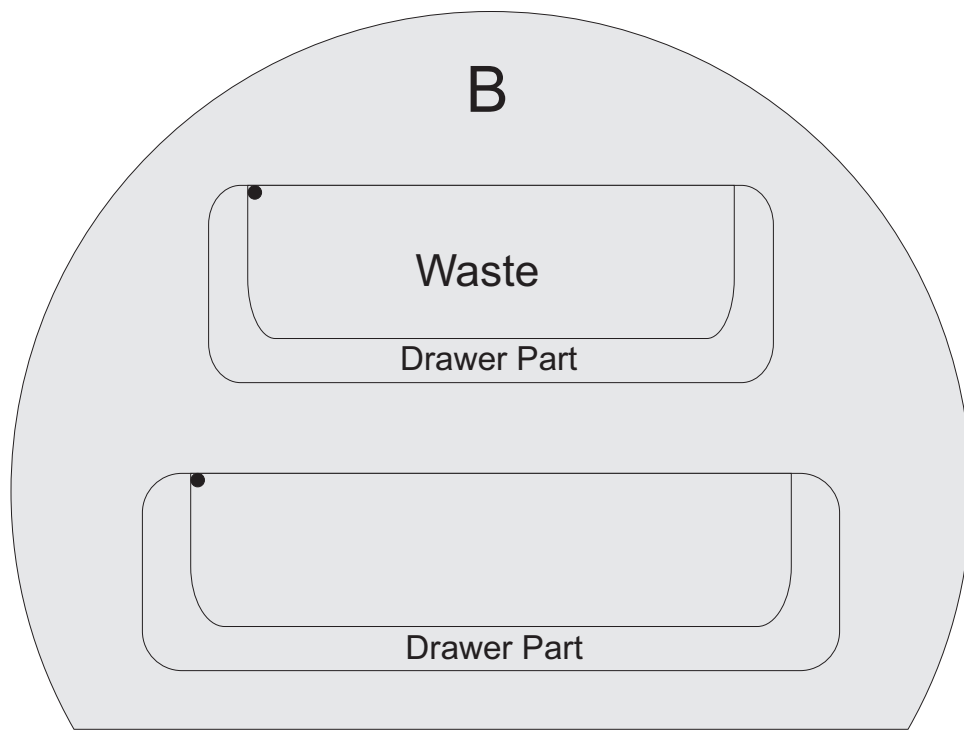


3/4" to 1" Thick

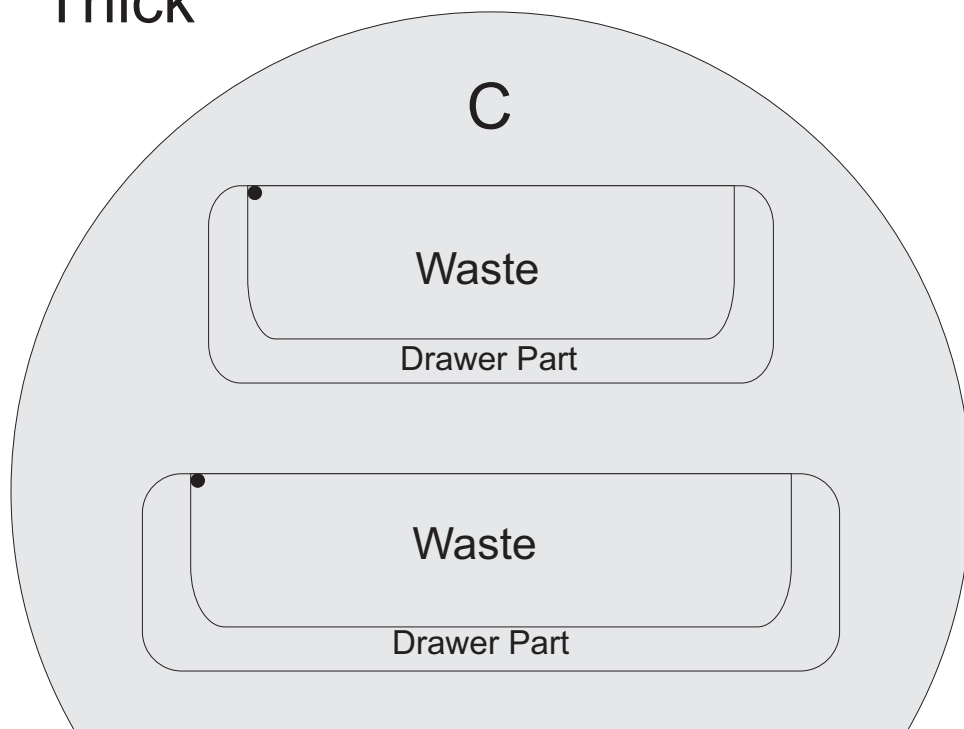

Glue parts A, B and C together and sand flush.  
Glue the drawer parts together and sand to fit  
drawer opening.

Box Front  
1/4" Thick

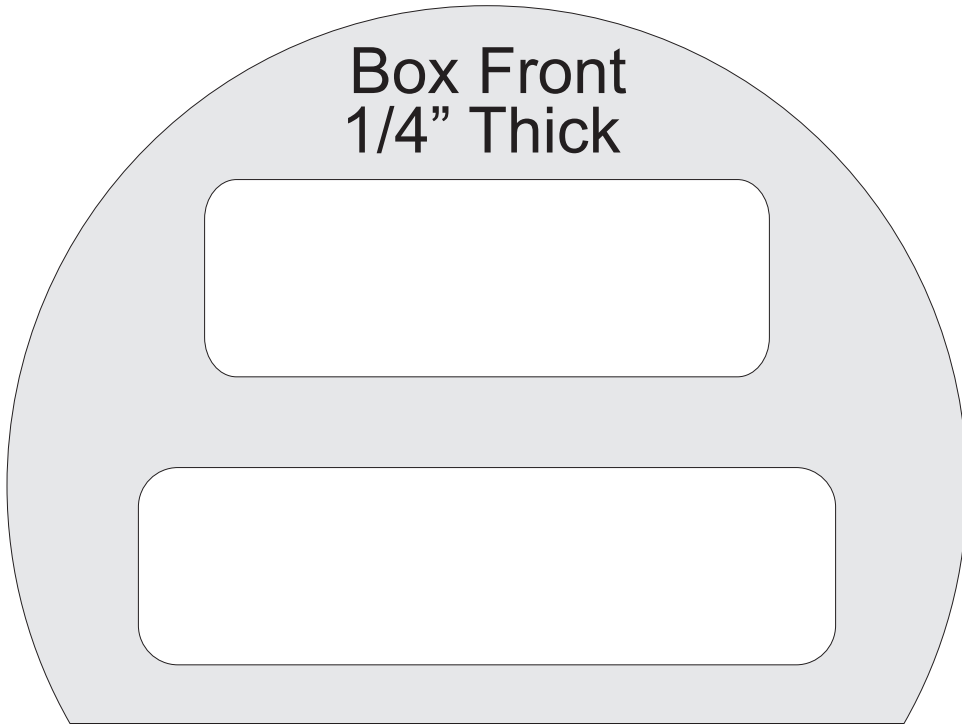

Box Back  
1/4" Thick



Glue the front and back to assembled parts  
A, B and C. Sand the complete unit flush.

1/4" Thick

Drawer Back


Drawer Back

Drawer Front

Drawer Front

Glue front and back to each drawer unit.  
The back of each drawer fits inside the  
drawer unit.

Assembled drawer unit.

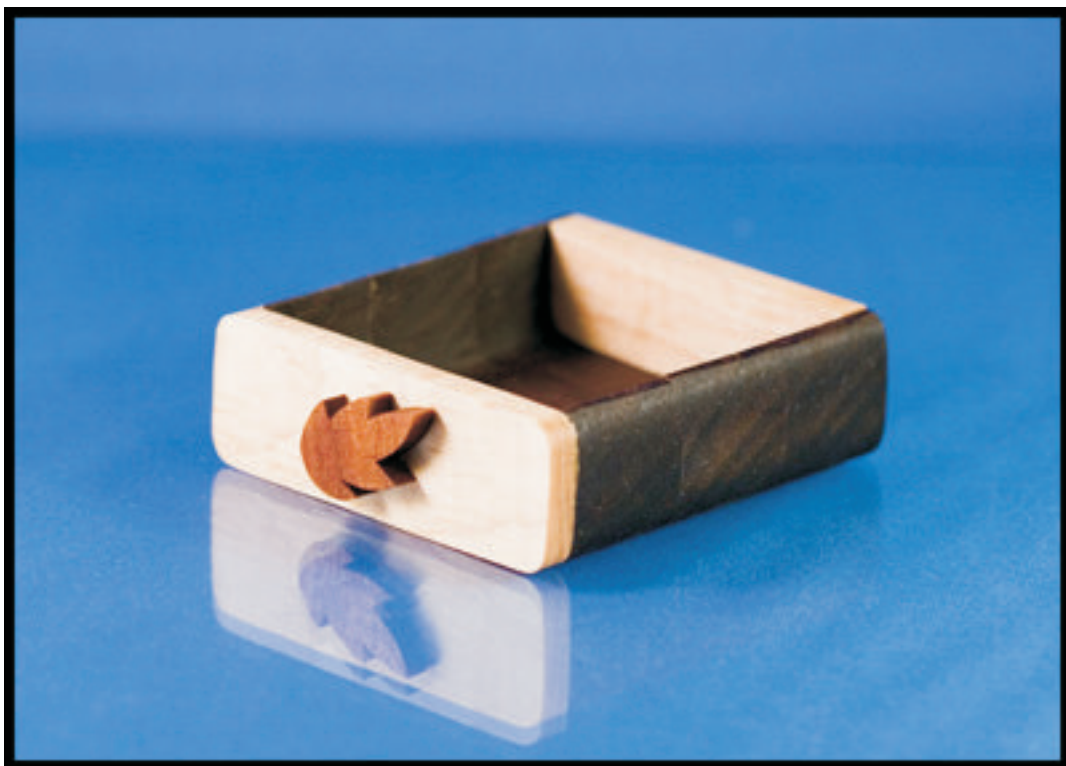

# Drawer Pulls 1/4" Thick

