

Digital Patterns



Designed by Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer and the Scroll Saw Key Chain Printer



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.






In this project we are going to remove the stock paper dial from a 3.5" clock insert and replace it with a custom paper dial included in this pattern.

Disassembly will be different from clock to clock.

I printed the replacement dial on a 4 X 6 piece of gloss photo paper on an inkjet printer. Cut the paper dial and trim to fit inside you clock. This dial is slightly under 3 inches and should fit if you cut just inside the circumference.



You will need a 1/4" hole in the center of the paper dial. I used the old dial and an exacto knife to get it centered and cut. Reassemble the parts and you have your custom clock.

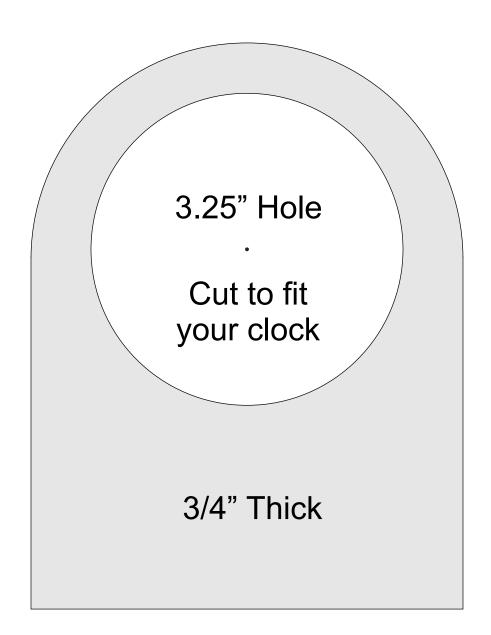

3/8" Thick







