

SCROLLSAW WORKSHOP


WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

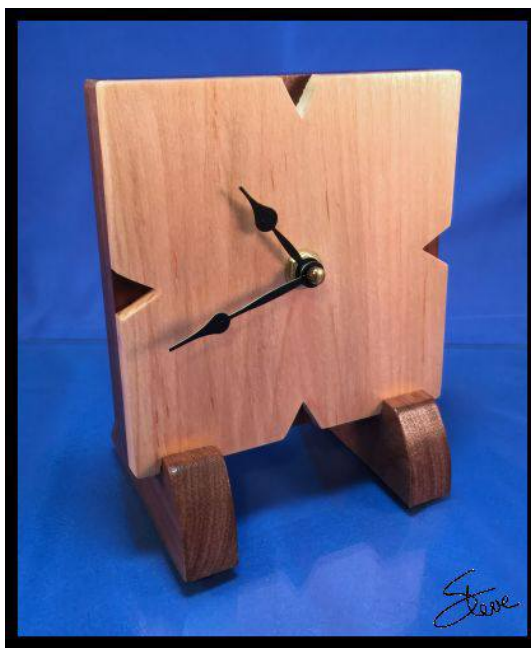

Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com


Copyright Steve Good 2015




Clock Movement for
1/4" Thick Stock.




Use 2.25" clock
hands.

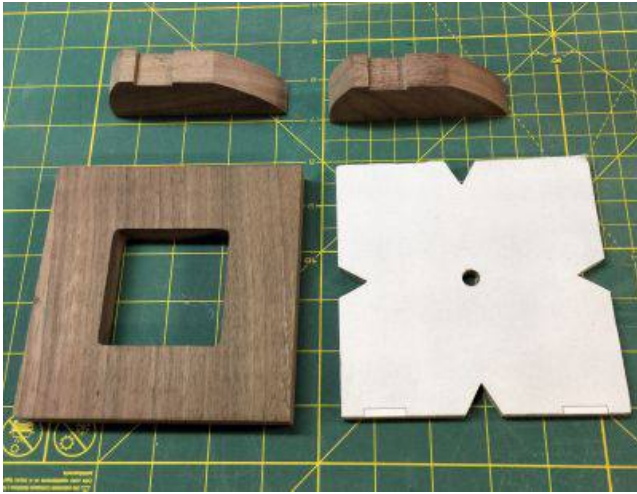

Cut all the parts. Do not cut the foot notches until the front and back are glued together.

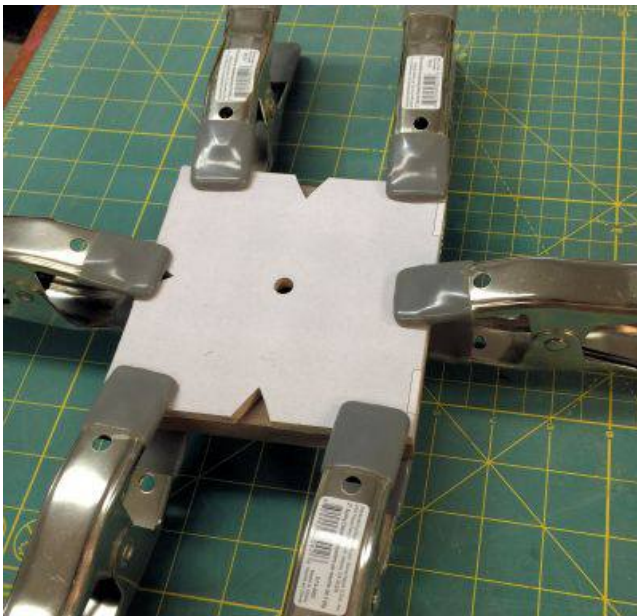

Glue and clamp the front to the Back and clamp. After the glue dries square up all the edged.

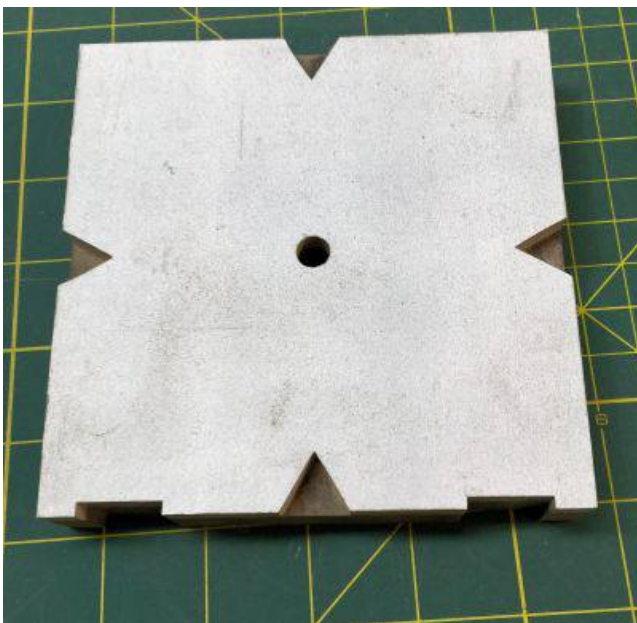

We left the pattern on the front so we can cut the foot notches.



Glue the feet to the clock frame.

Install and adjust the clock movement.

Leave the pattern attached
to the front until the front
and back are glued together.
Then cut the feet notches.

