



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer



Simulation




3 1/4 inch hole for a
3 1/2 inch clock insert
(90mm)



5 x 10 inch
cut from 1/2 inch material



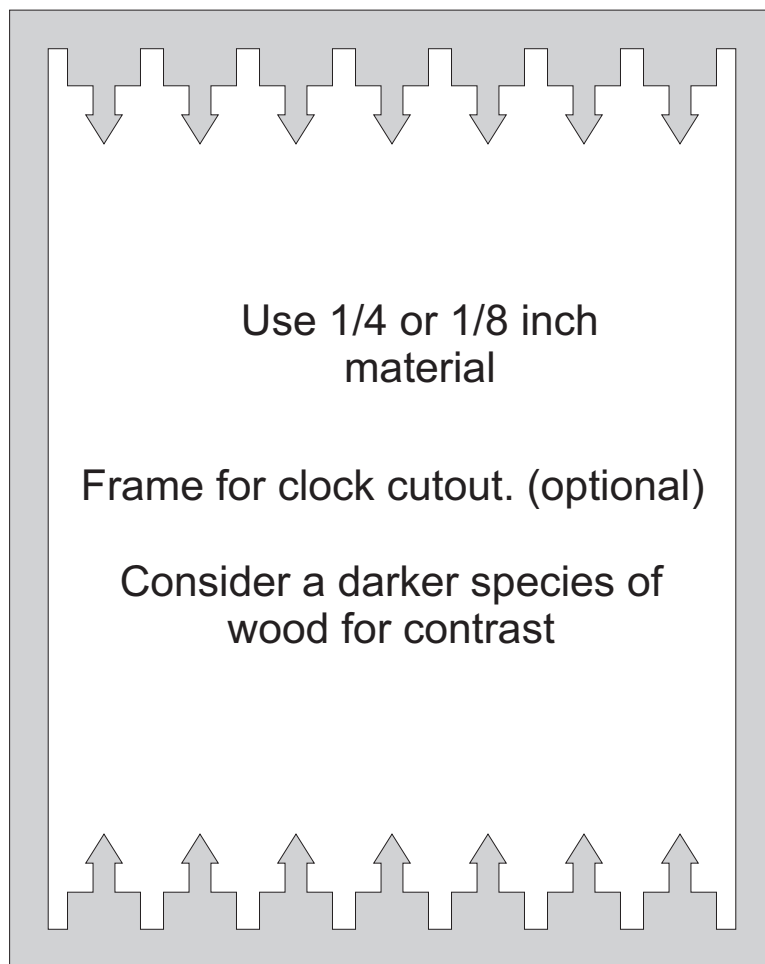


Back 5 x 10 inch
from ½ inch material

Side cut two
3 x 10 inch
½ inch material

(Optional) use a cove bit for ornamental trim.
See picture on page 2

top and bottom. Cut two
6 ½ x 5 ½ inch
½ inch material

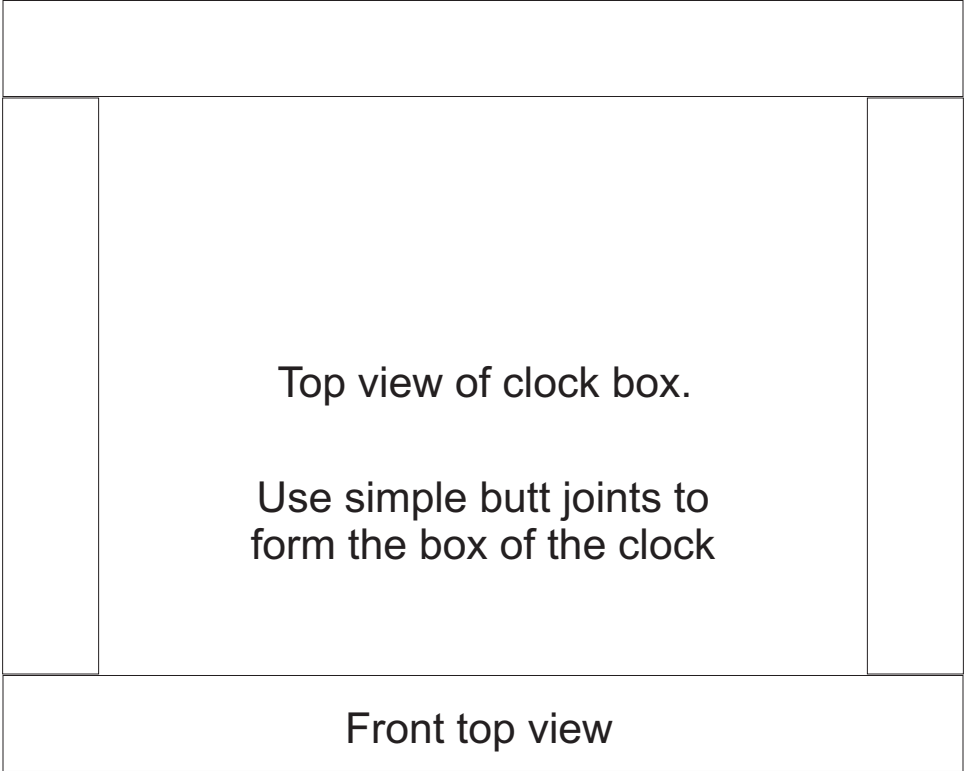

Top view of clock box.

Use simple butt joints to
form the box of the clock

Front top view