



# Digital Patterns

Designed by  
Steve Good

[www.scrollsawworkshop.blogspot.com](http://www.scrollsawworkshop.blogspot.com)


Home of Scroll Saw Pattern Printer



# The Patriot Clock



Top 3/4" Thick

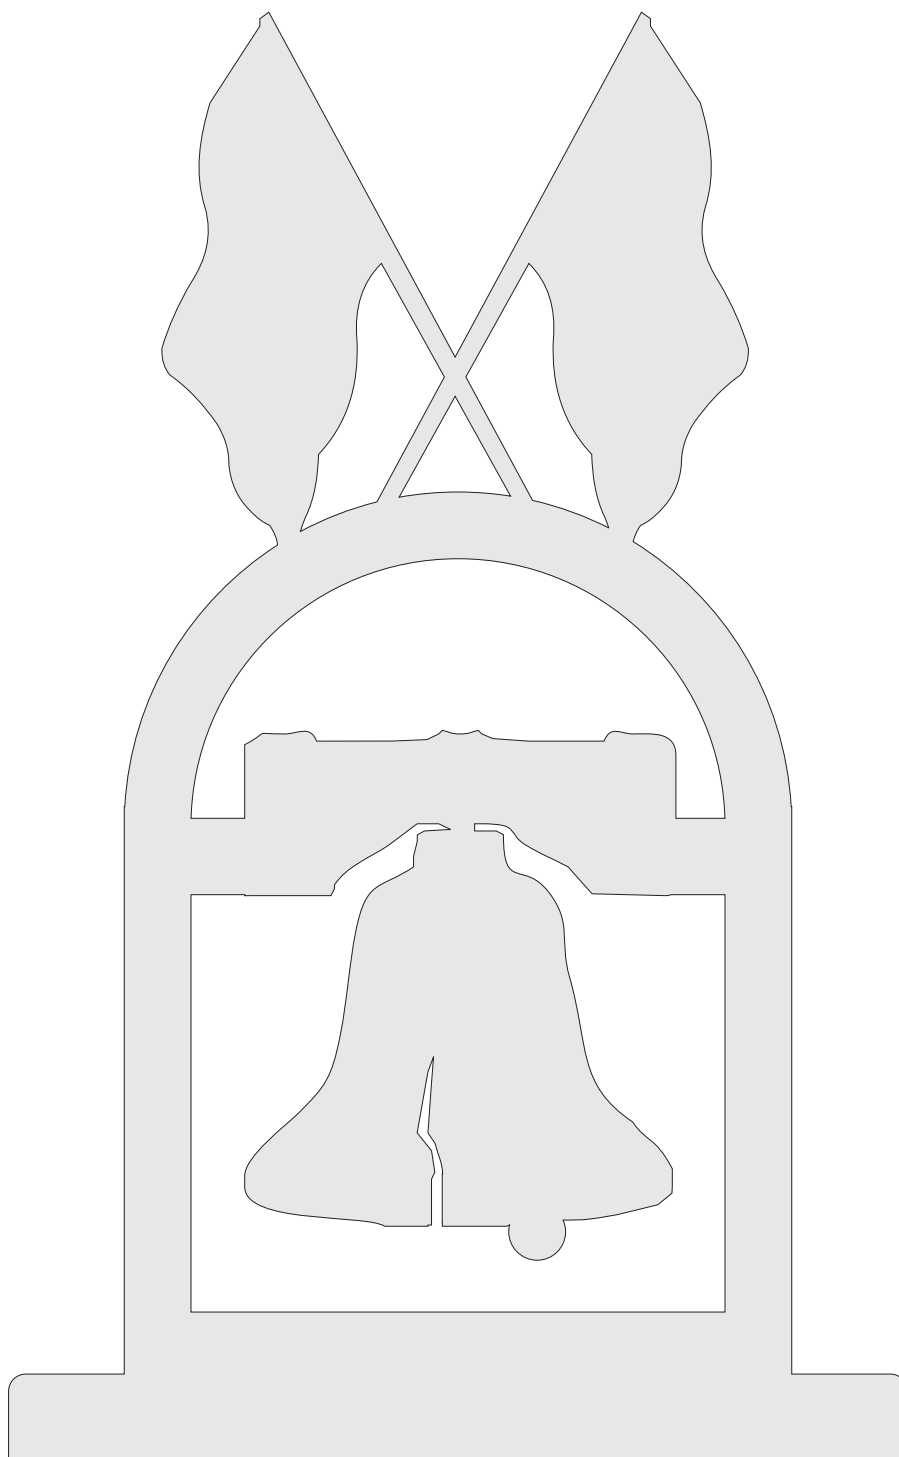

5" x 5"


3/8" Thick



This project requires a 2 3/4" clock insert.  
I purchased mine at [www.woodcraft.com](http://www.woodcraft.com).  
Item number # 125116. The hole for the  
insert is 2 3/8".


2 ½" x 5"

3/8" Thick

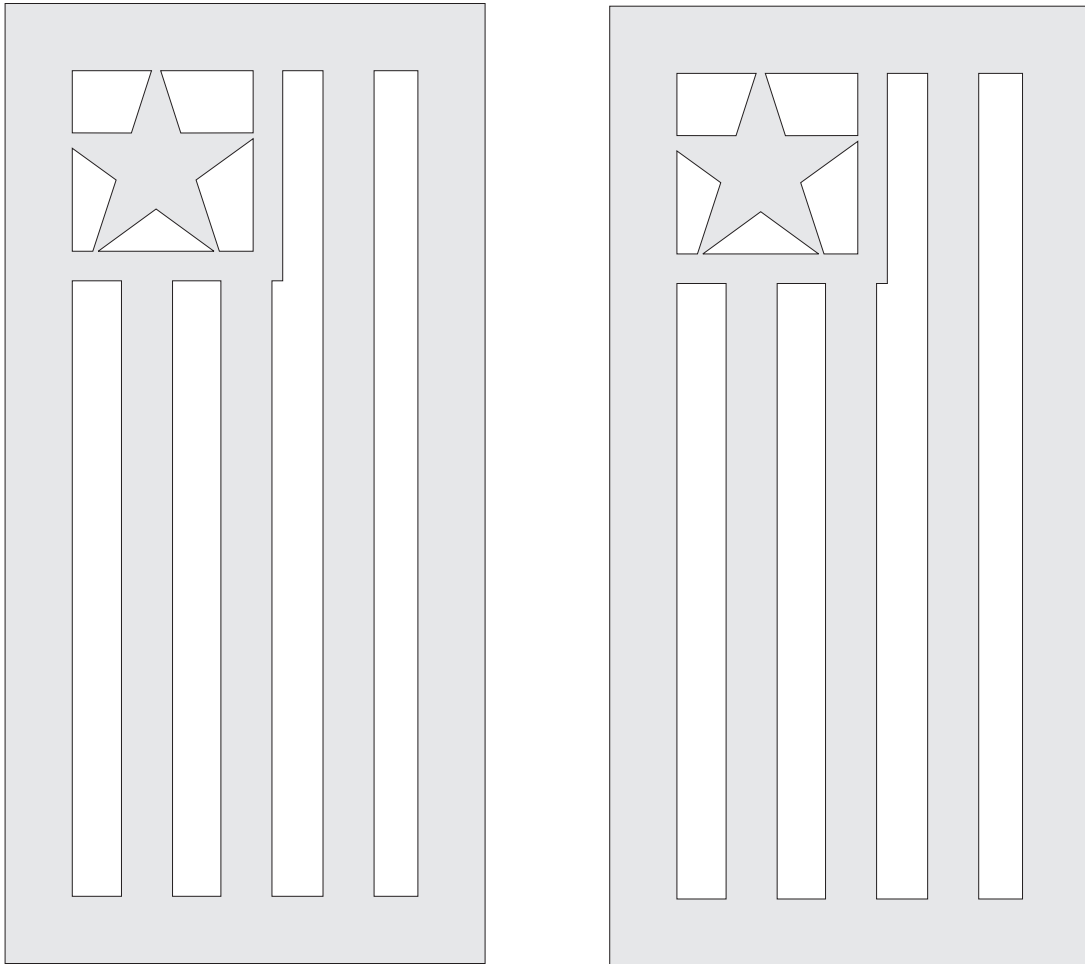

Sides of America Box.

5" x 5"  
3/8" Thick



Back of America box.


5 1/2" x 5 1/2"

3/8" Thick



2 1/2" x 5 1/2"

3/8" Thick

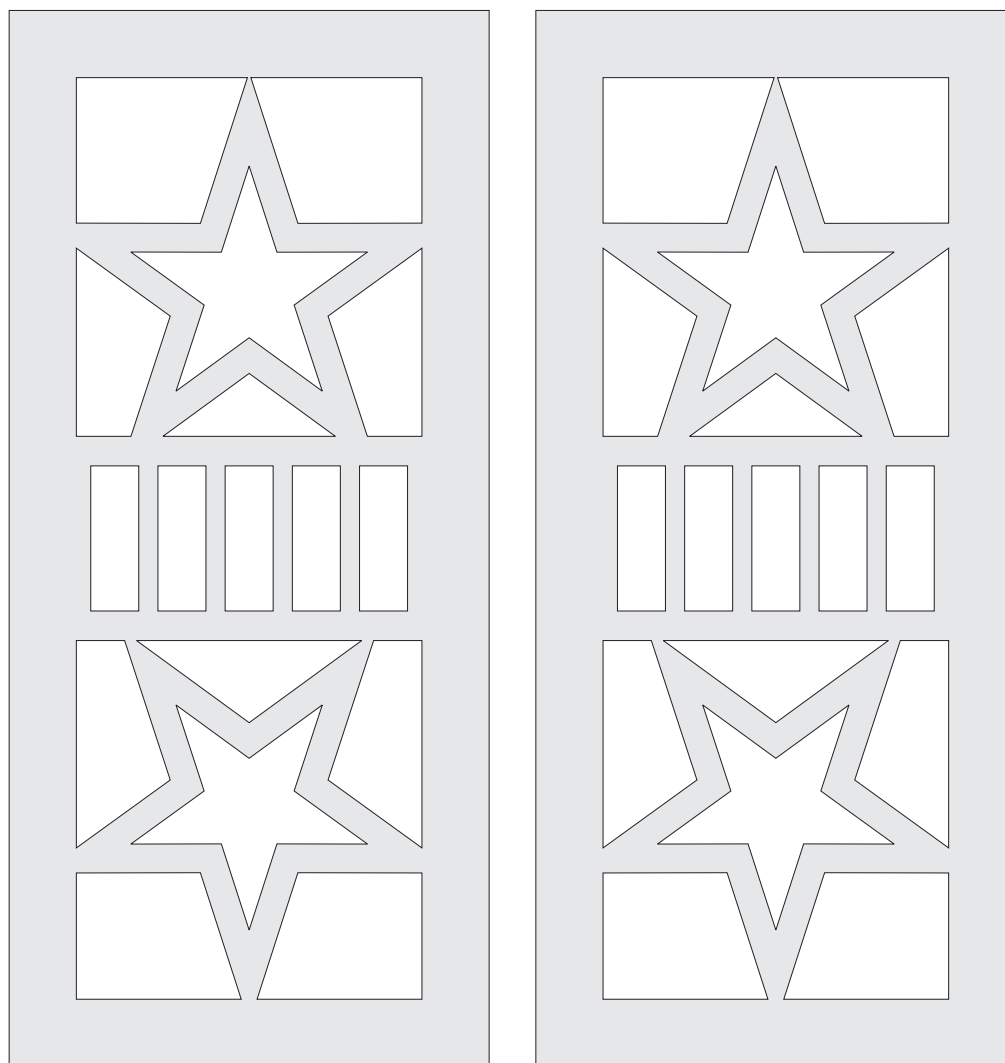

Sides of eagle box.



Back of eagle box.

5 1/2"x 5 1/2"

3/8" Thick

All bottom pieces  
need to have a cove  
routed on all four edges.

6" x 4 1/4"

1/2" Thick

All bottom pieces  
need to have a cove  
routed on all four edges.

6" x 4 1/4"

1/2" Thick

All bottom pieces  
need to have a cove  
routed on all four edges.

6 1/2" x 4 1/4"

1/2" Thick

All bottom pieces  
need to have a cove  
routed on all four edges.

Base

7 1/2" x 5 1/4"

3/4" Thick

## Assembly Instructions.

Assemble the two boxes using simple butt joints. The side walls are glued to the inside as in the diagram below.



A table saw should be used to cut all the pieces to size first. This insures the boxes will be square.