


- 1. Make a print of the full size patterns. Cut out patterns and apply spray adhesive to back of pattern.
- 2. Cut out pattern using a scroll saw, band saw or jig
- 3. Sand surfaces until smooth with no splinters or splintering. Radius all edges by sanding until rounded.
- 4. Apply non-toxic clear or color finish coatings.


Scroll saw, band saw, jig saw or coping saw.

Hand power drill or drill press.

Sandpaper.

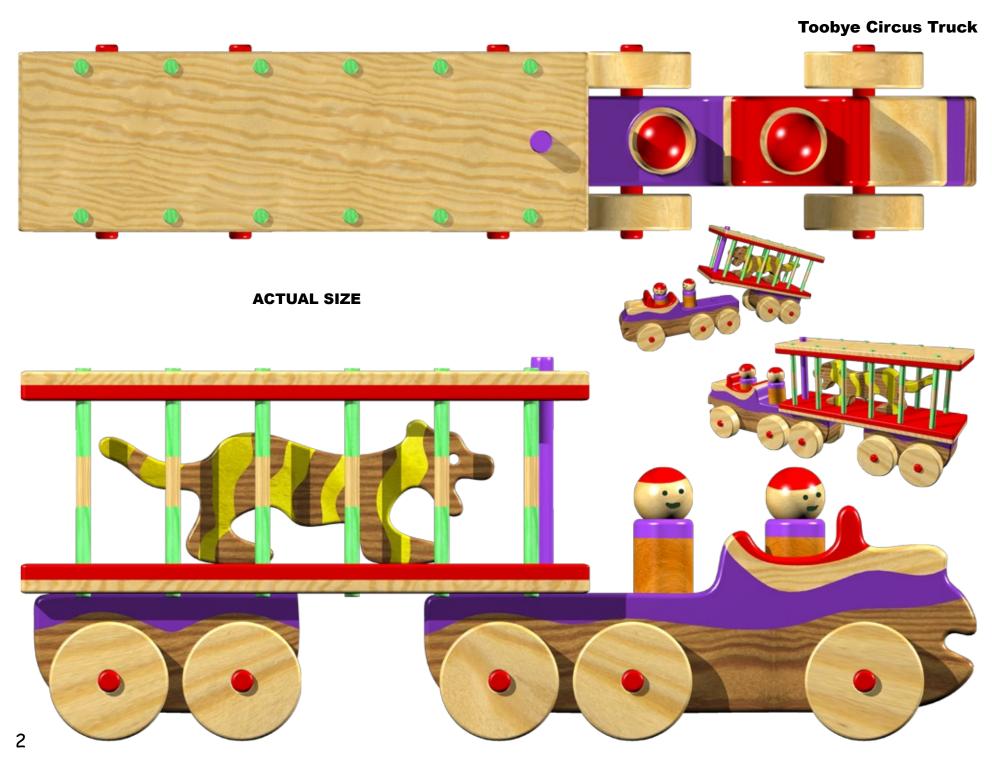

## **Toobye Circus Truck**

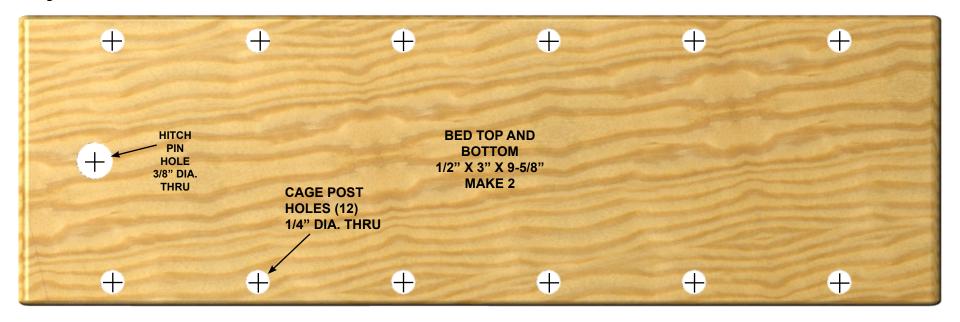

Ball for 1" dia. head from **www.craftparts.com**Part No. KBB100




PATTERNS SHOWN FULL SIZE



**CAGE POST 1/4" DIA. X 3-7/8" MAKE 12** 

COPY PATTERN AND ATTACH TO WOOD BLANK FOR DRILLING PATTERN.



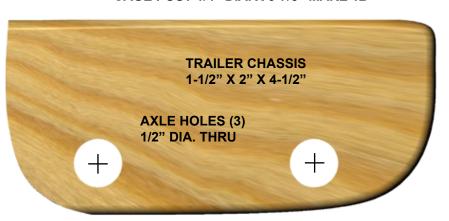

## PATTERNS SHOWN FULL SIZE

## **Toobye Circus Truck**

