



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com


Home of Scroll Saw Pattern Printer




Table Train Clock



1 7/16" Clock Insert

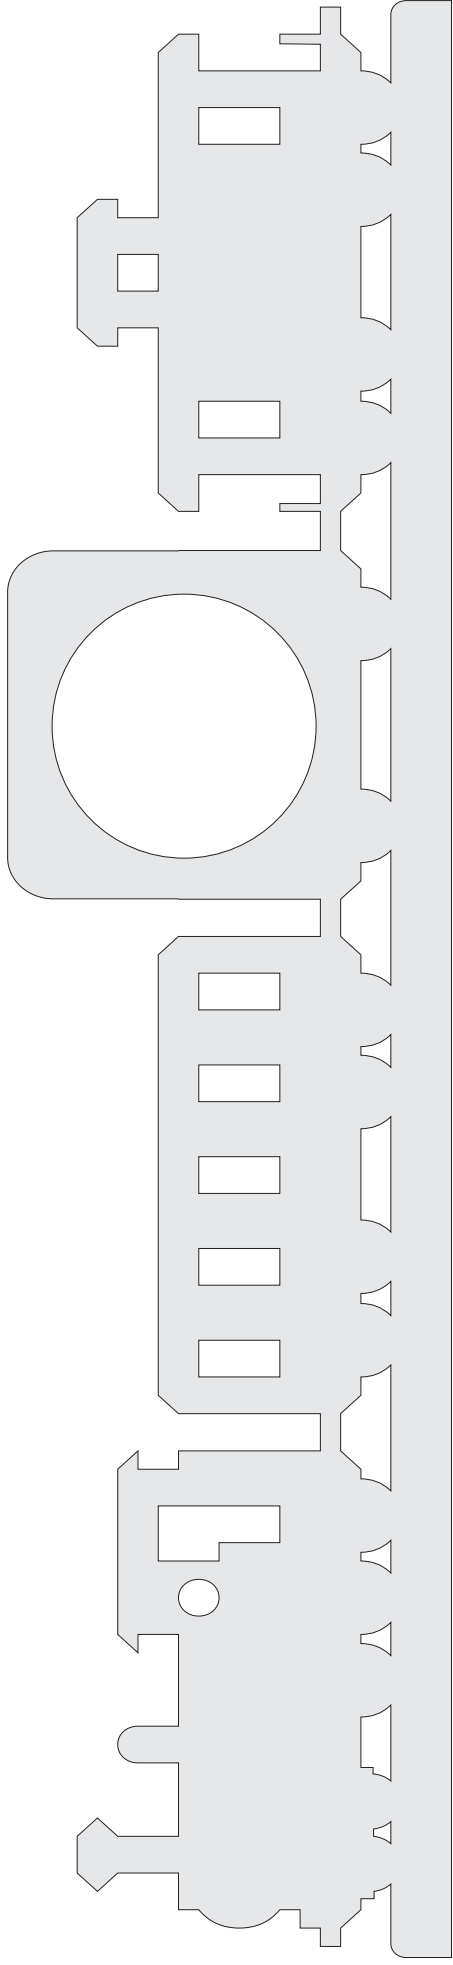

1 3/8" Forstner Bit to cut the clock insert.



3/4" Thick Wood