



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com


Home of Scroll Saw Pattern Printer



Watch



Requires a 1 7/16"
mini clock insert. Use
a 1 3/8" forstner bit to
cut the hole.

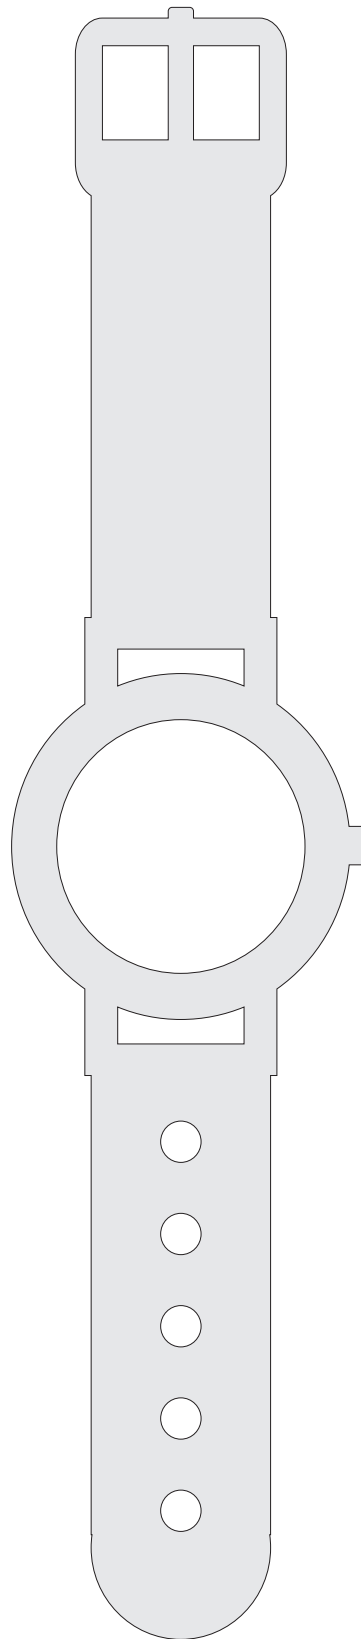

Compound cut pattern.

