





Digital Patterns


Designed by Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

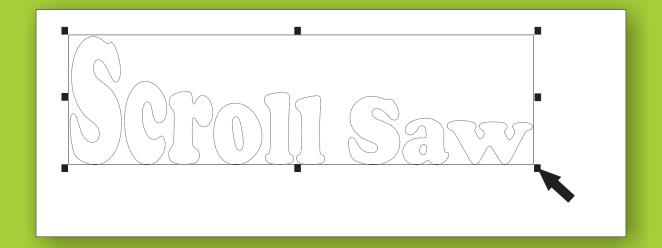


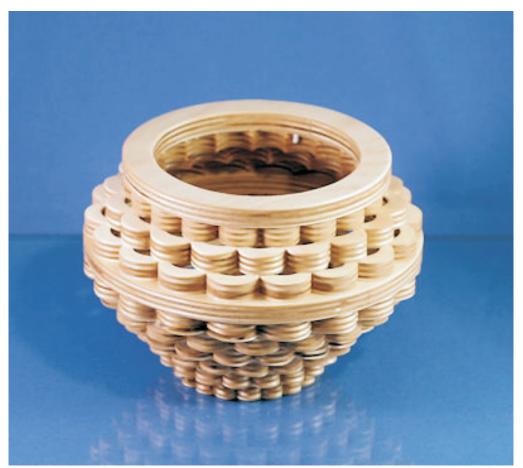

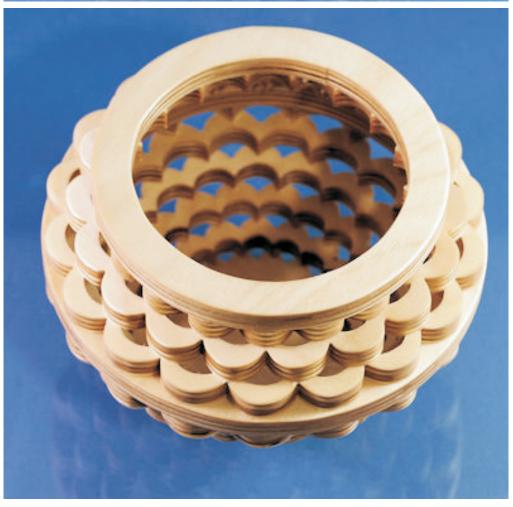

Bottom Weaves

All stock is 3/8" thick

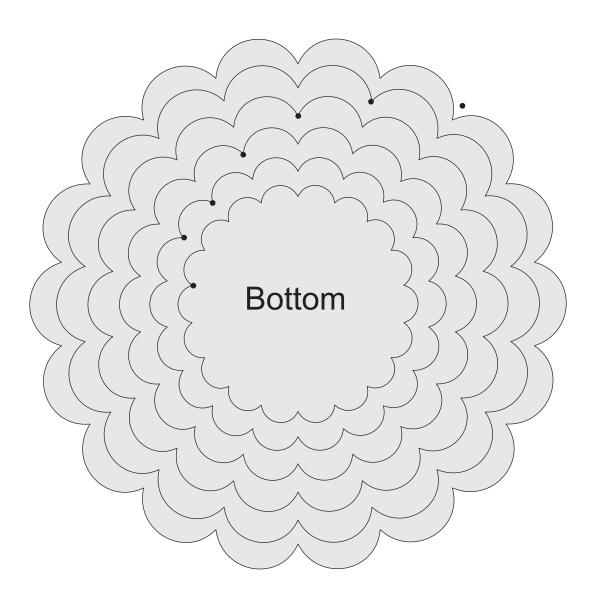

Use a 1/6" drill bit or smaller to help conceal the entry holes.

Top three weaves Only cut the three outer rings. All stock is 3/8" thick

