



# Digital Patterns

Designed by  
Steve Good

[www.scrollsawworkshop.blogspot.com](http://www.scrollsawworkshop.blogspot.com)

Home of Scroll Saw Pattern Printer  
and the Scroll Saw Key Chain Printer




Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

## Ipad steering wheel cradle.



**WARNING:** this cradle is intended to be used only when the car is not moving.



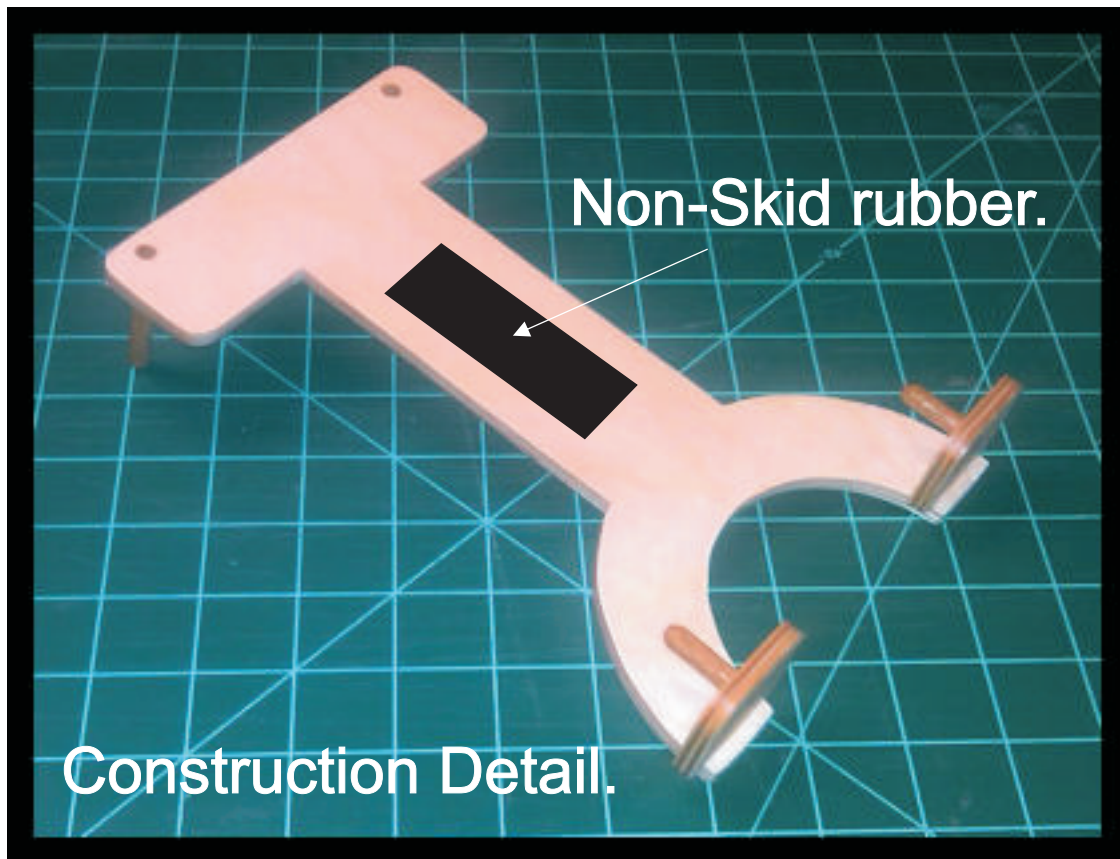


The cradle is designed not to be attached to the wheel. It sits on the two top dowels. This prevents driving with the cradle in place for safety.

Us 1/4" Baltic Birch Plywood for stability.


Undersize the holes for the dowels so they are snug then glue them in place.

Make sure the slots are cut undersize and file to a tight fit of the tabs. Glue the tabs in place.

Drill the holes undersize  
so the 1/4 inch dowels are a tight fit.

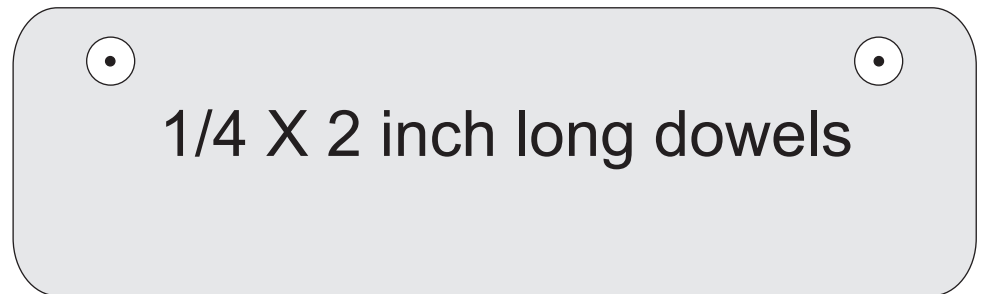

1/4 X 2 inch long dowels

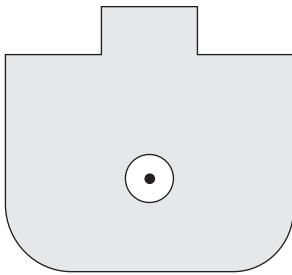

1/4 X 1 inch long dowels

