




Digital Patterns


Designed by Steve Good


www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

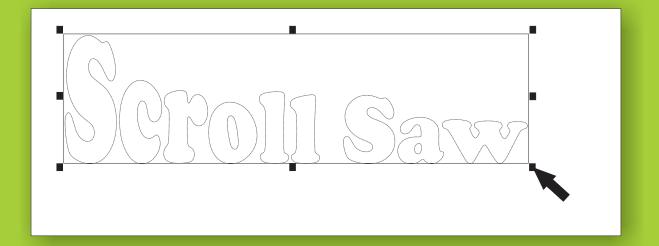


Wolf Hand Saw

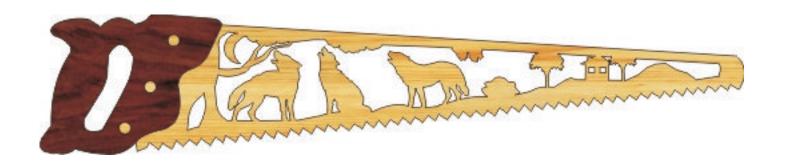

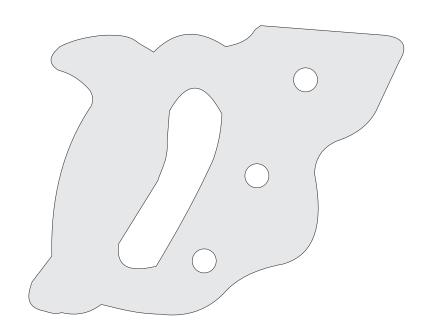

1/4" Thick handles

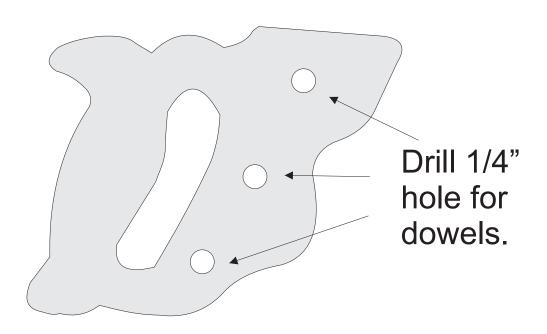

After you glue the handles to the saw, drill the holes for the rivets through the handles and saw blade. Hammer 1/4" dowel into the holes.

Reattach the pattern pieces on the wood blank at the cut lines.

