

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM


Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

If you would like
to donate click
here. No Paypal
account needed.

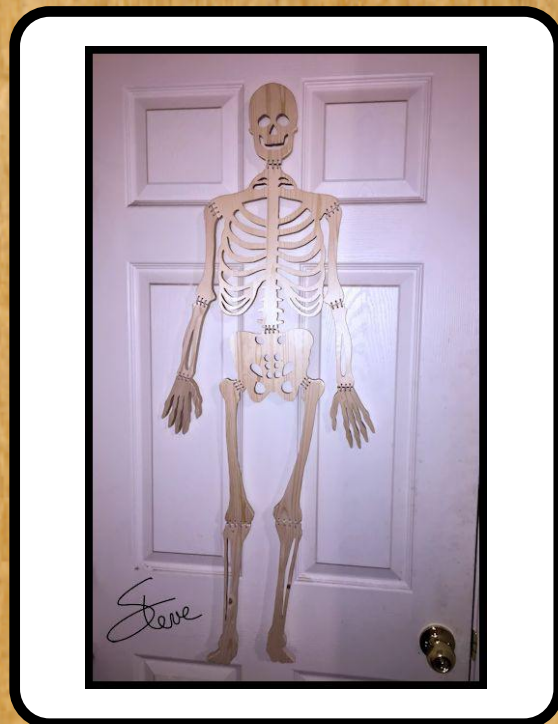

Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2017

General Pattern Information



You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the “Page Sizing & Handling” section. Make sure the “Actual Size” is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the “Pages to Print” section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



Page Sizing & Handling ⓘ

Size

Poster

Multiple

Booklet

☐ Fit

☒ Actual size

☐ Shrink oversized pages

☐ Custom Scale: %

☐ Choose paper source by PDF page size

Pages to Print

☒ All

☐ Current page

☐ Pages

▶ More Options

Woody is 42 inches tall



HERITAGEWOOD.COM !

Your source for scroll saw ready boards.
www.heritagewood.com



I used a laminated spruce panel purchased from Home Depot. It was 16" X 48". I laid out the patterns and made my cut marks to cut the board down to the correct size blanks.






The pattern was then applied to each blank using spray adhesive.





All the interior holes were drilled and each piece was cut at the scroll saw.

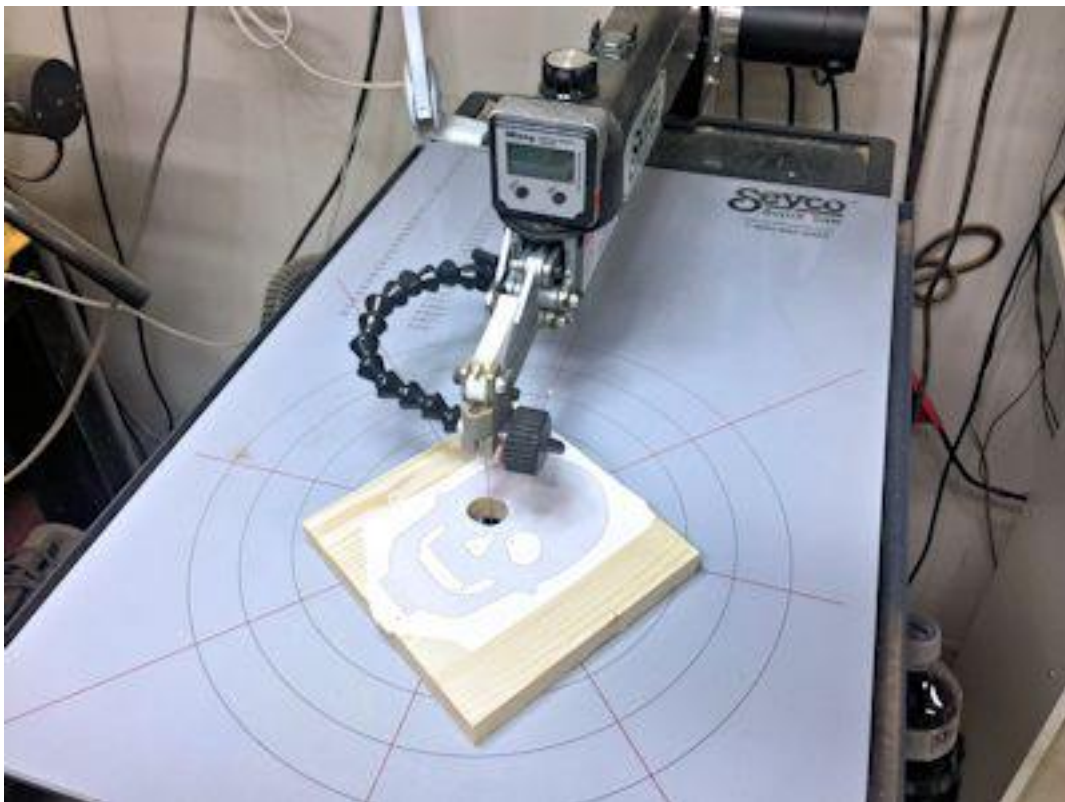



I marked the assembly holes with an awl and used a 1/8" drill bit to drill all the holes.

I then used six inch zip-ties inserted from the back to tie all the pieces together.





Secure the zip-ties leaving some looseness so woody can move a little. Cut the waste zip-tie.


From the front the assembly looks like this.









I used a saw tooth hanger so Woody could hang out on my front door.


Assembly guide




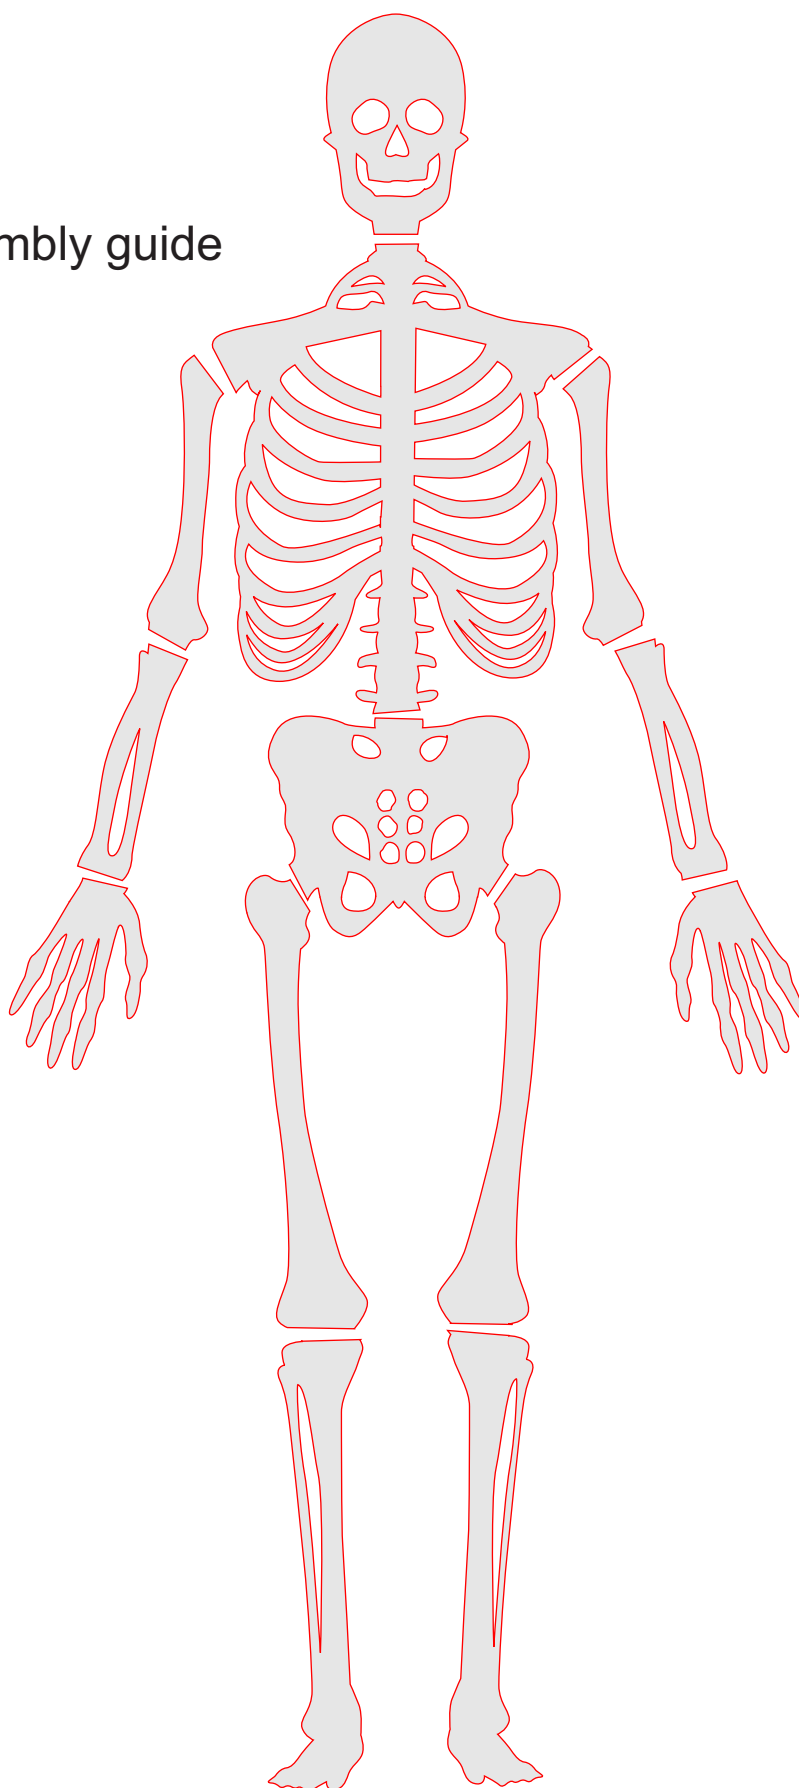


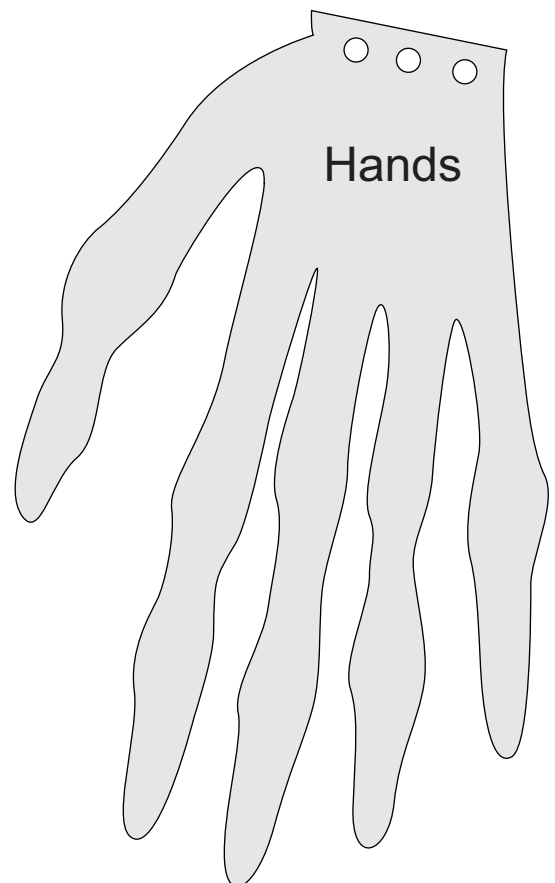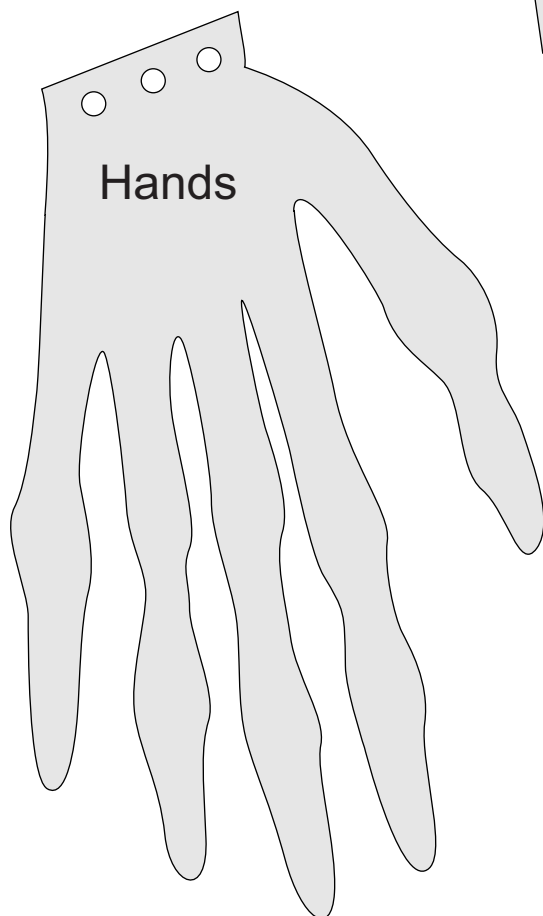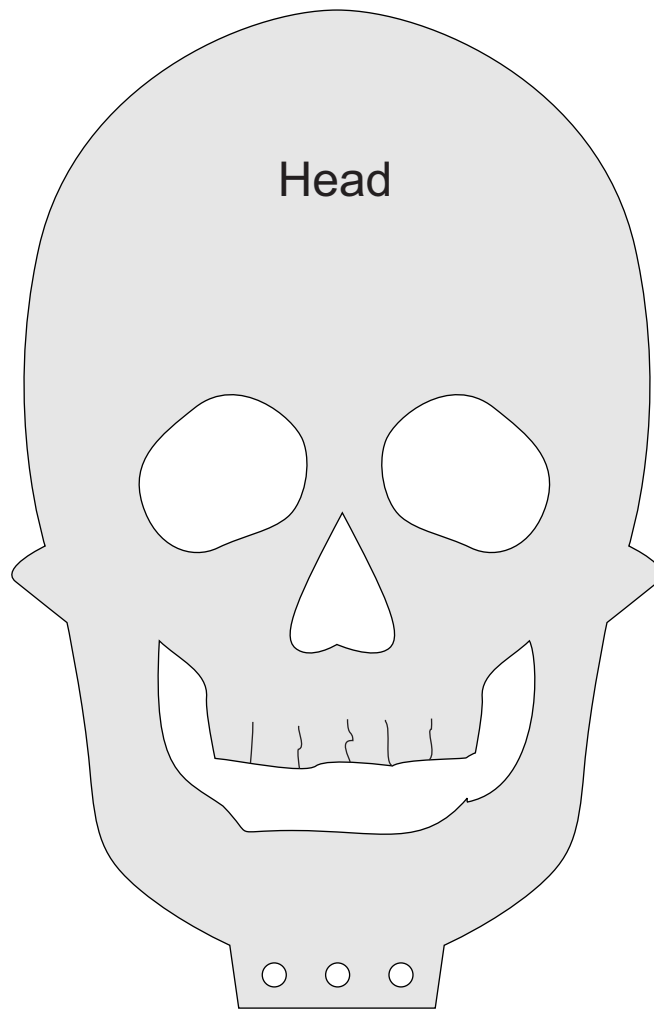


Tape this page and
the next page together
to make one pattern.

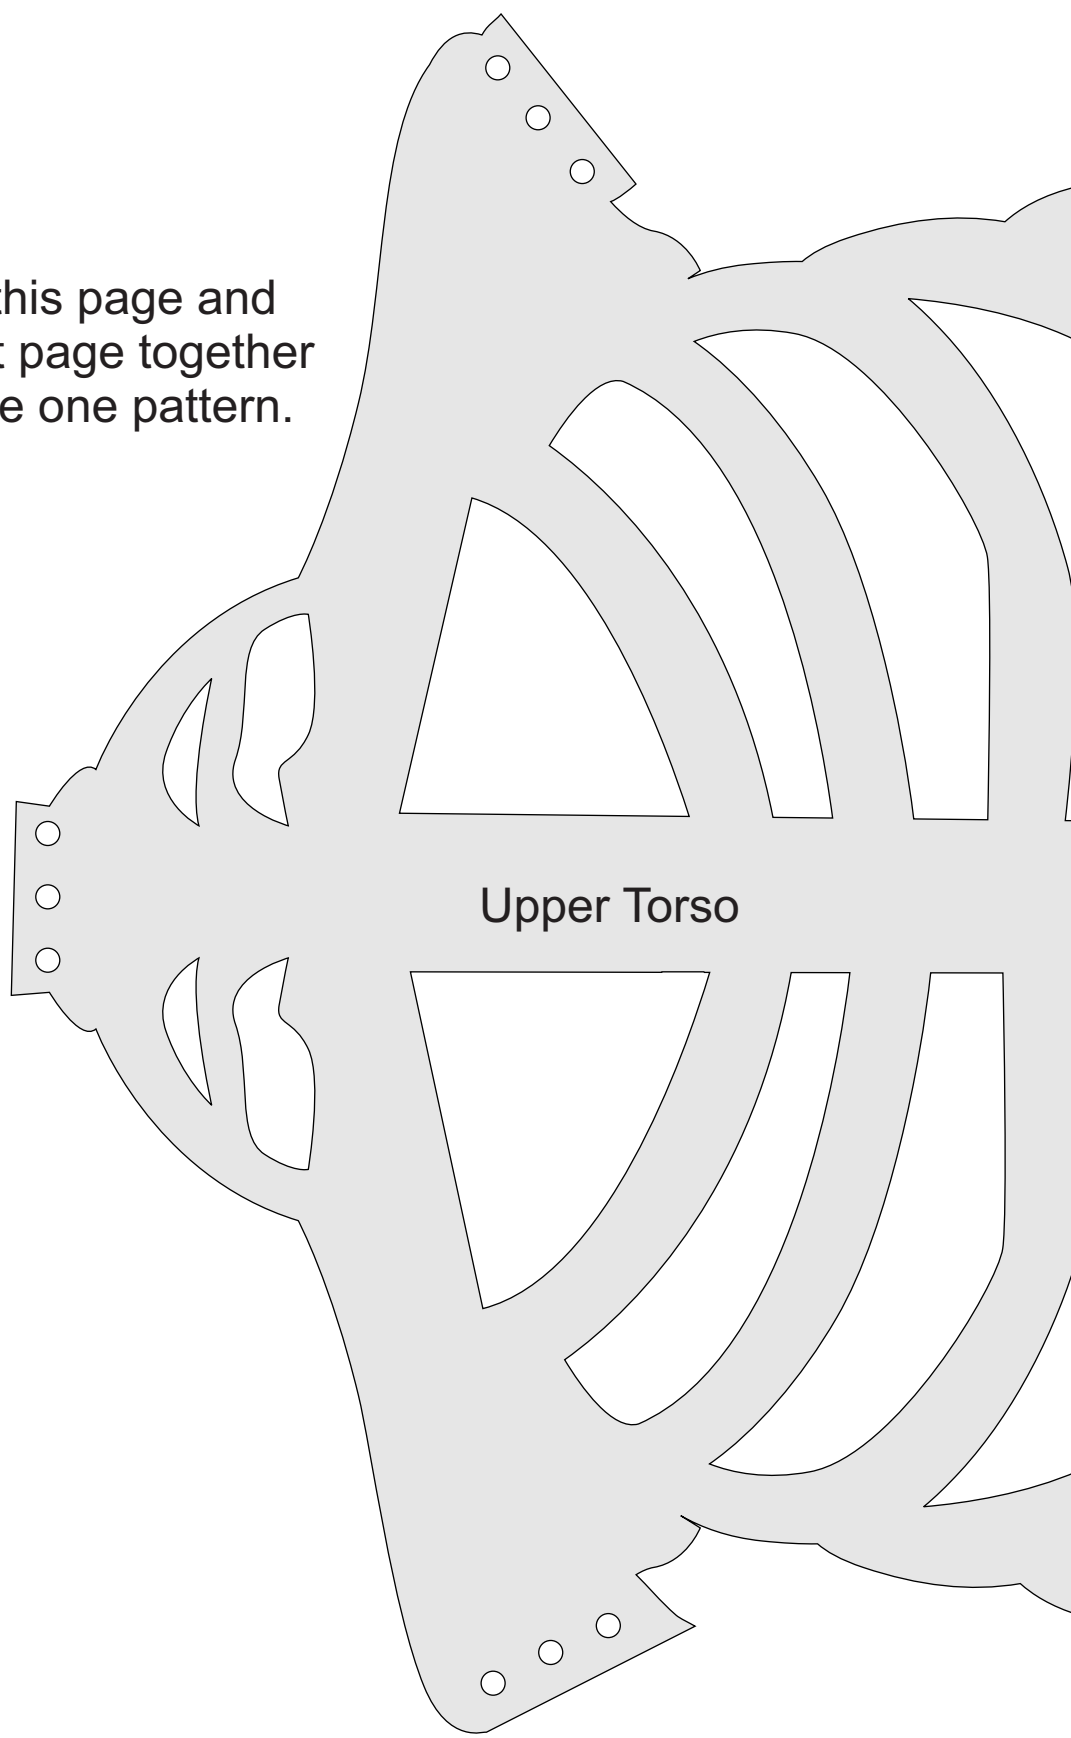

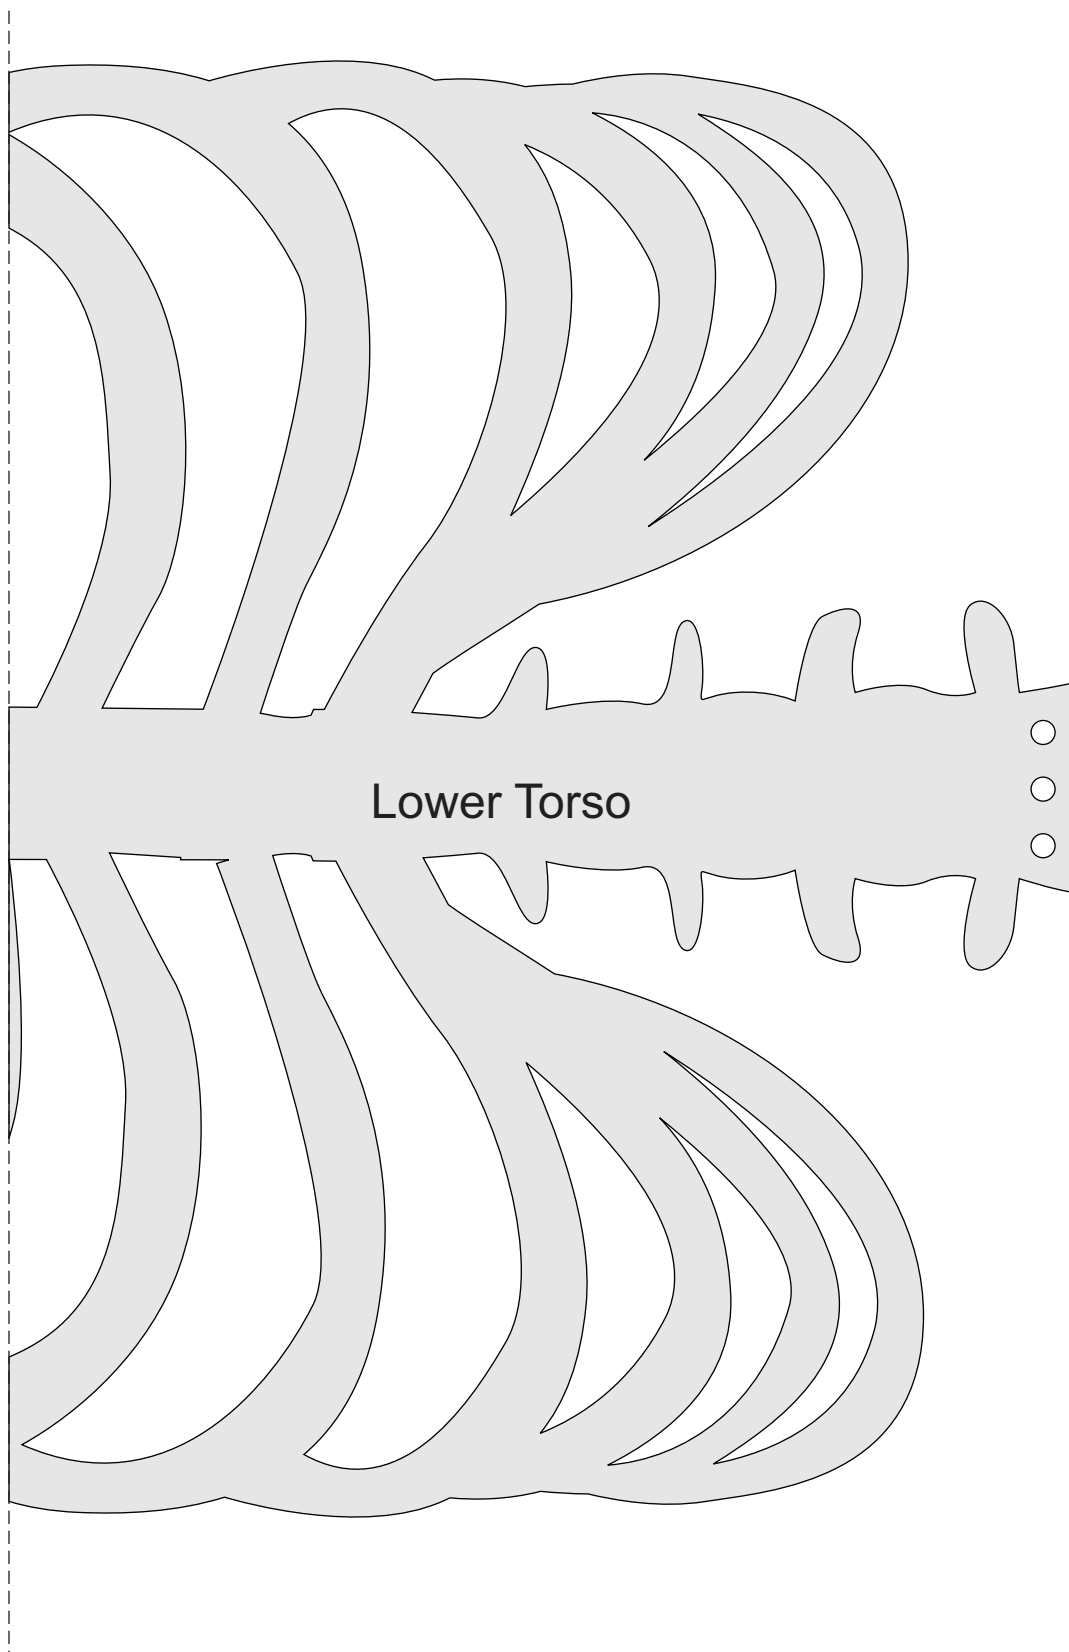

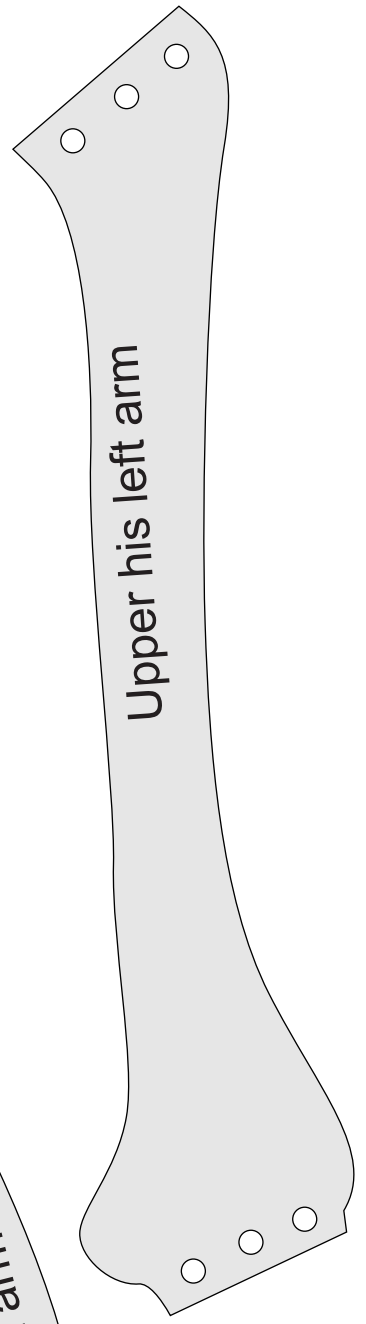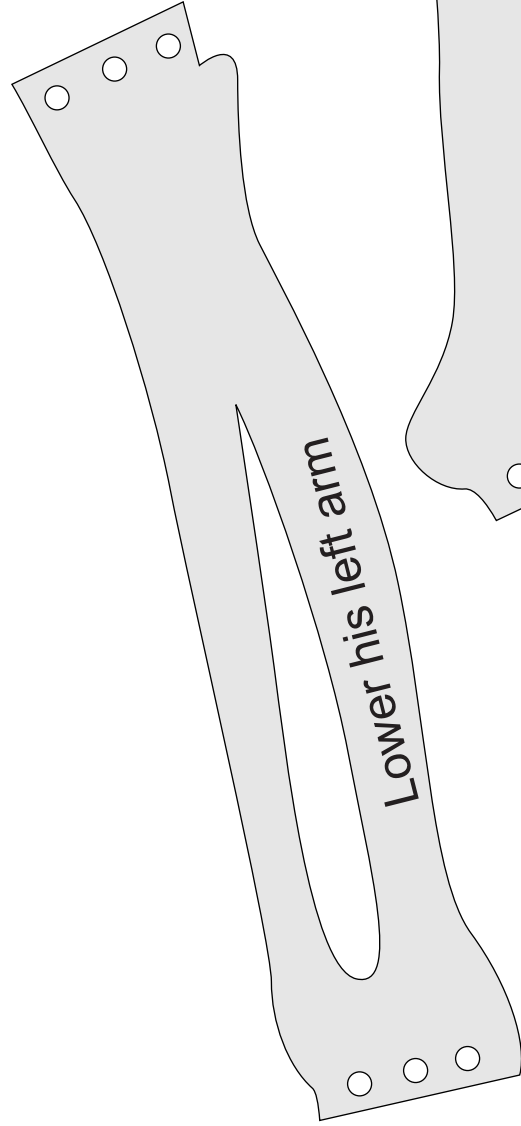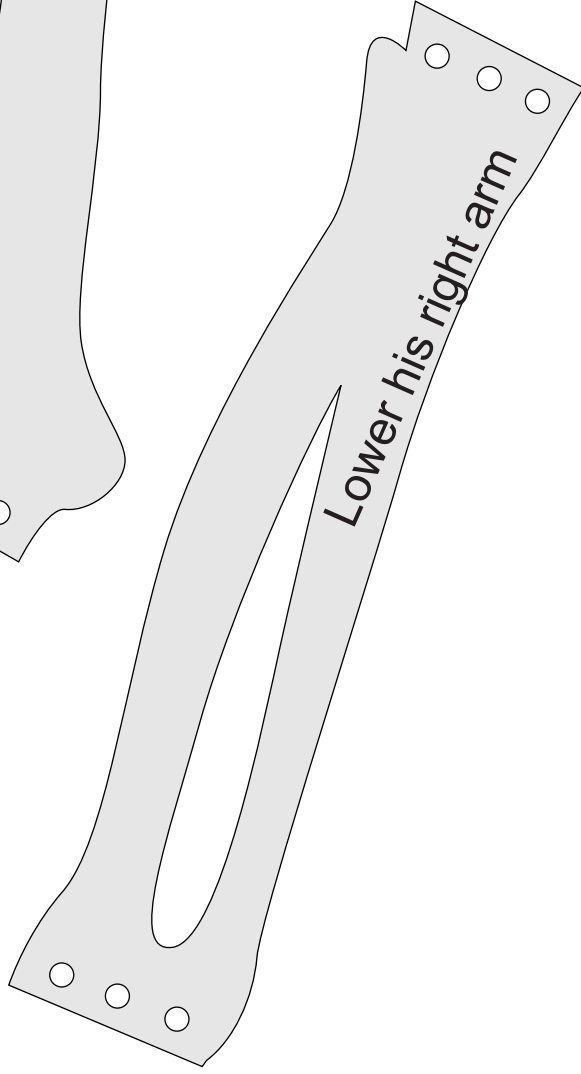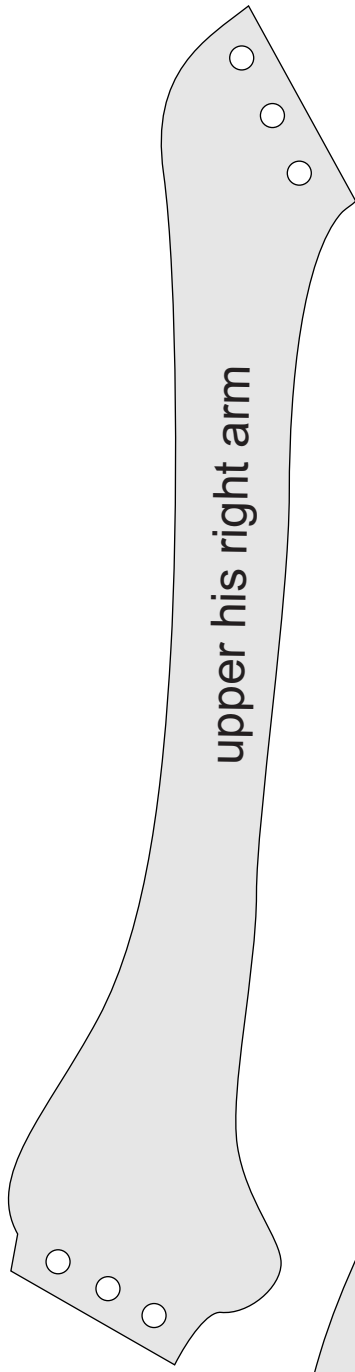

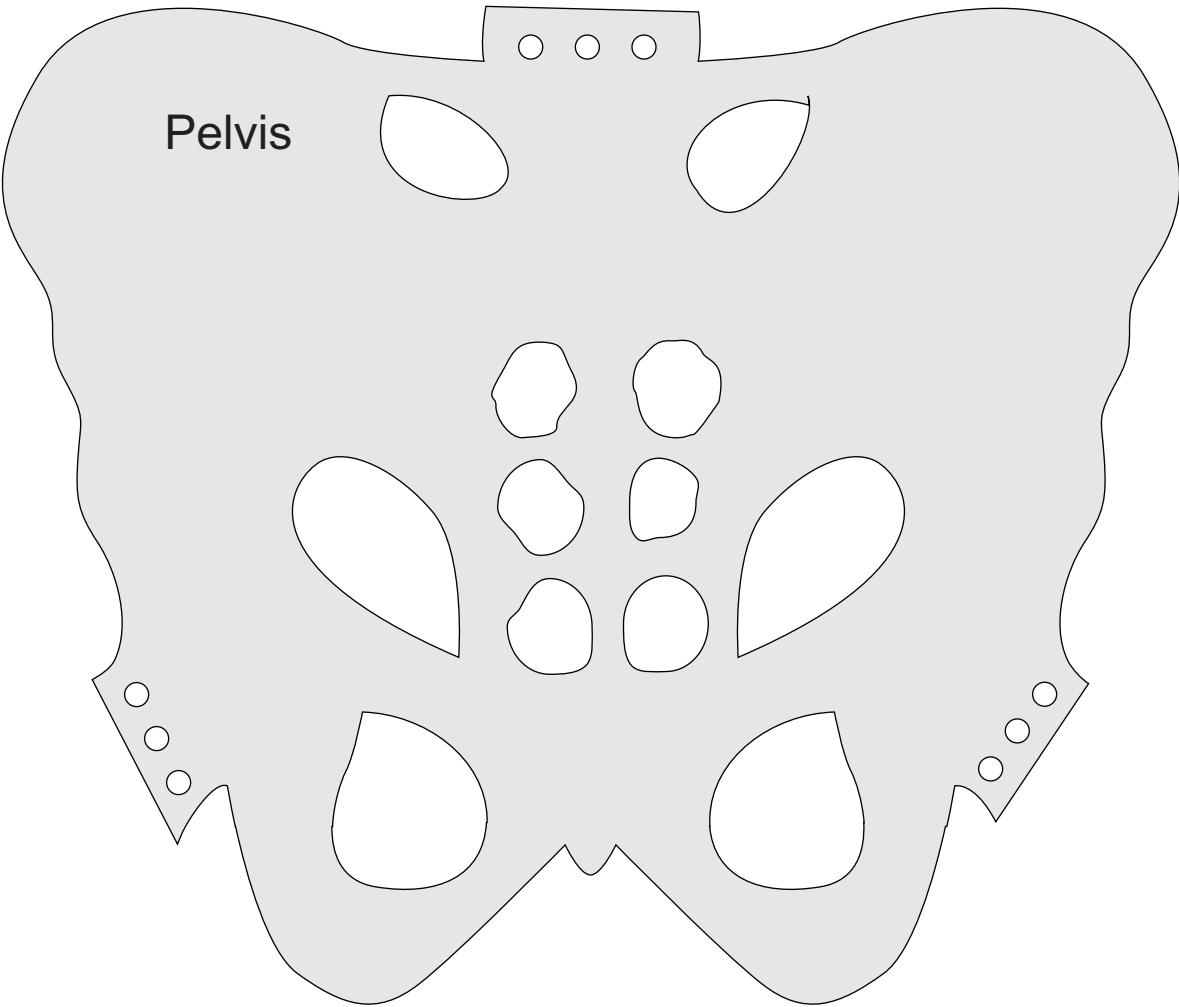

Pelvis

