Digital Patterns

Designed by
Steve Good

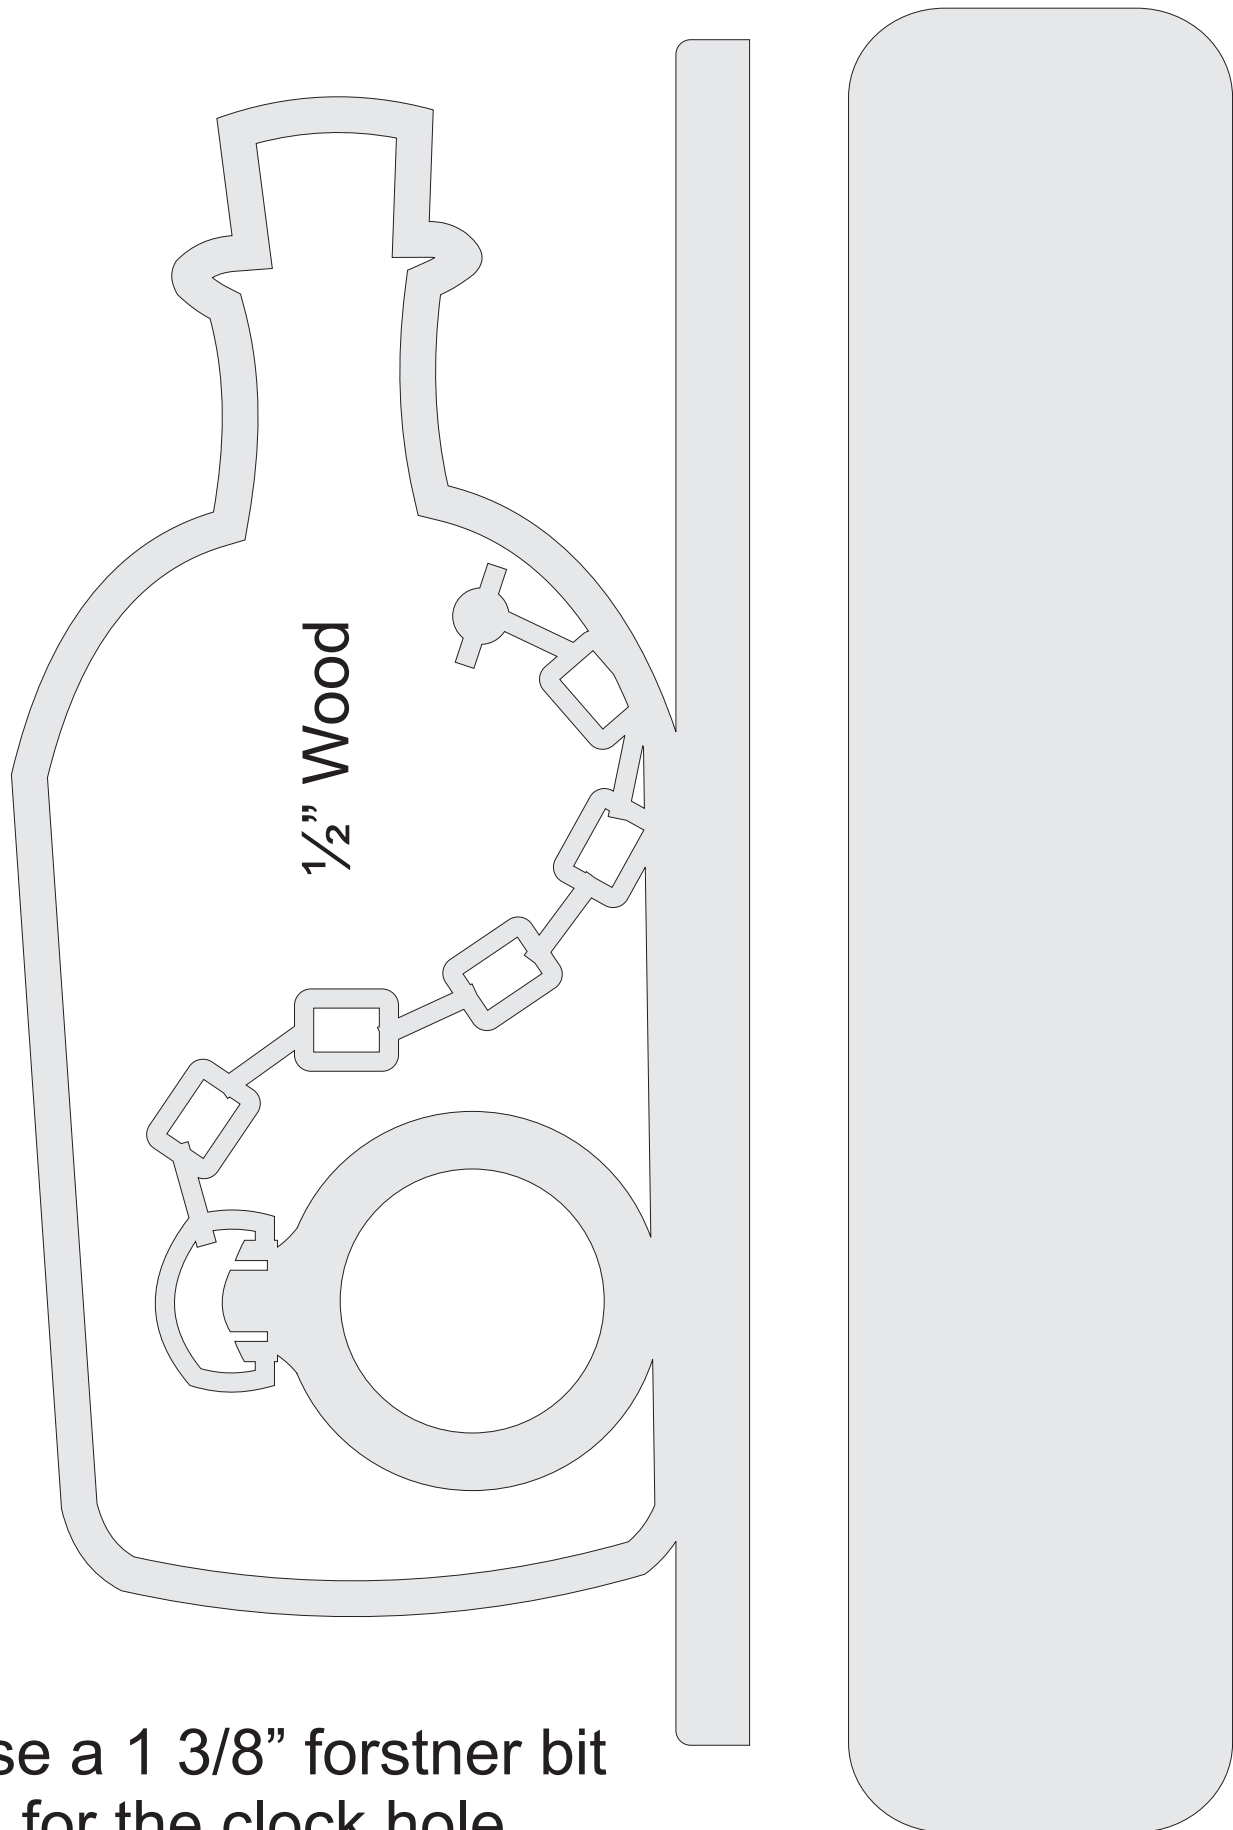# www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

Time in a bottle
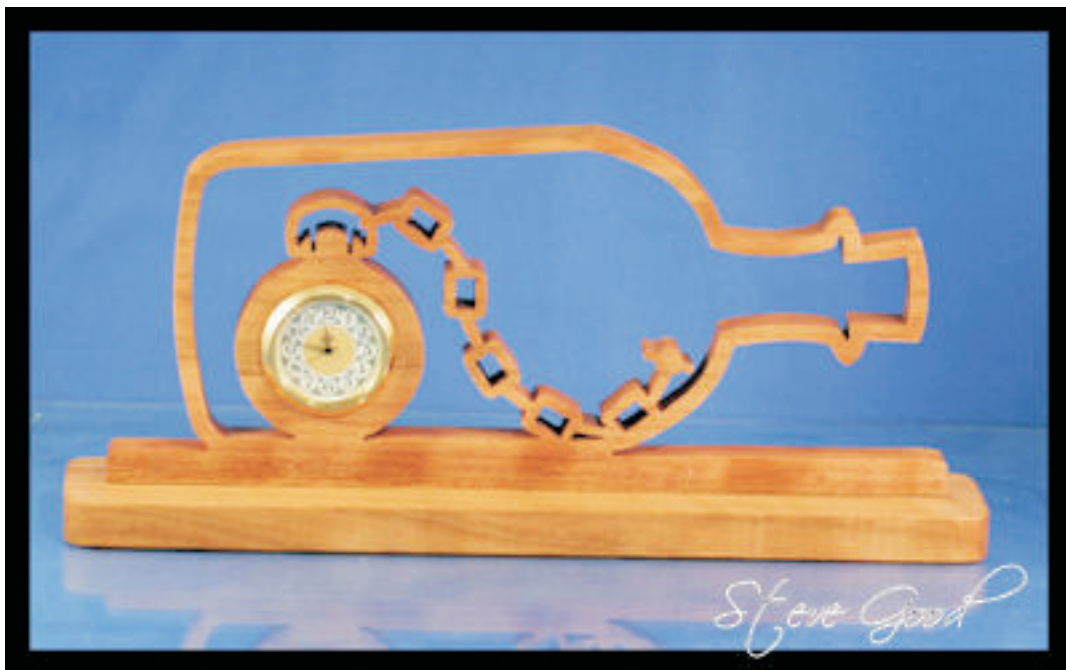
Requires 1 1 7/16" mini clock insert

½" Wood

Use a 1 3/8" forstner bit
for the clock hole.