SCROLLSAW WORKSH

Digital Patterns Designed by Steve Good







Hundreds of free Patterns Stencil Printer **Jigsaw Puzzle Templates** Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.

If you would like to donate click here. No Paypal account needed.







You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.


You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.


Printing Instructions



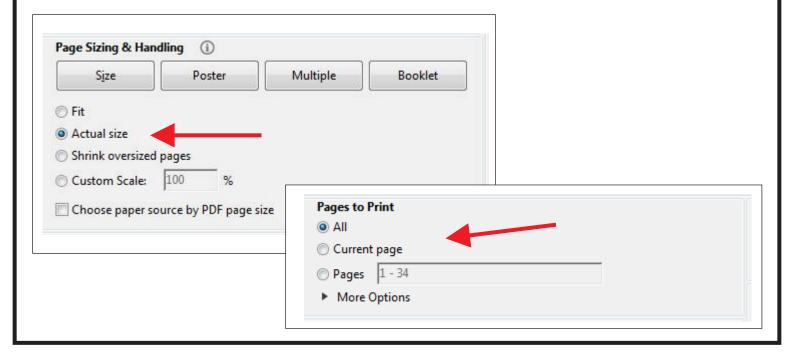

M&M Candy Dispenser

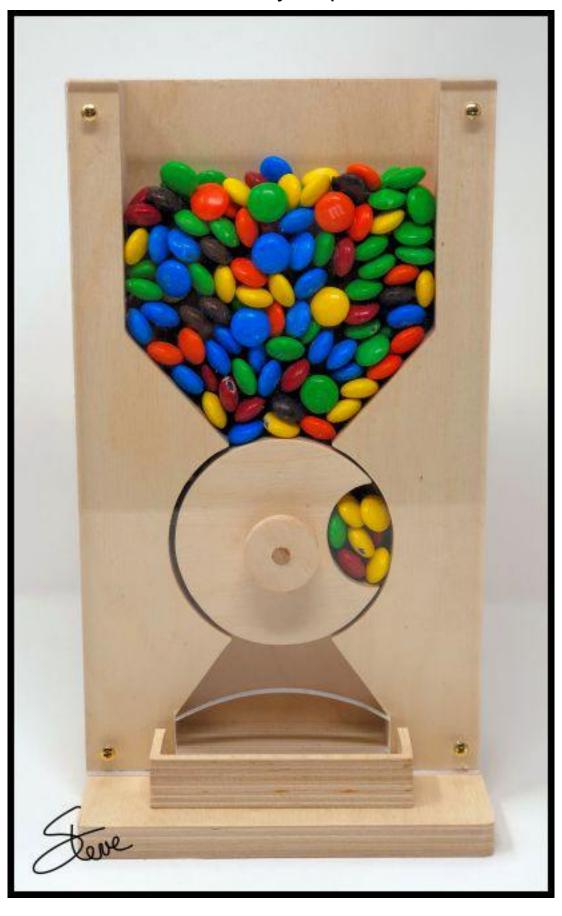

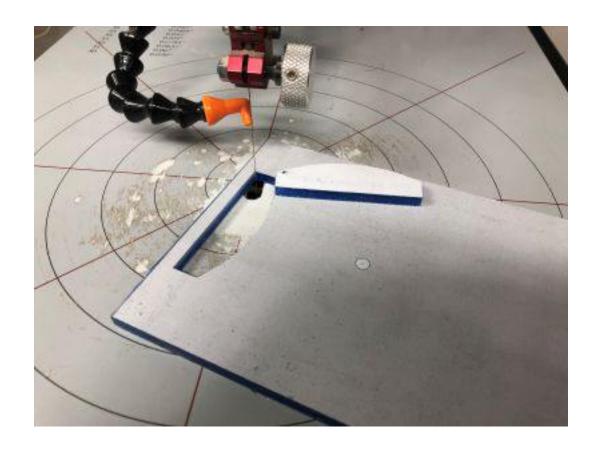


Cast acrylic is the easiest to cut but with care you can cut most acrylic sheets. Cut the sheet to size and carefully drill the hole accurately.






Sand the diameter and thickness of the dial for smooth operation. I sanded of about 1/16" thickness.

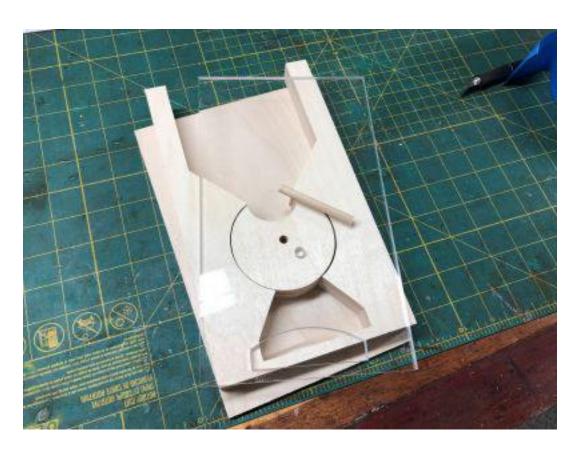



The most critical step is to get the holes lined up so the dial does not bind. Use clamps to hold the pieces together for gluing on the back and drilling the screw holes for the acrylic sheet. Test and re-test as you assemble the pieces.




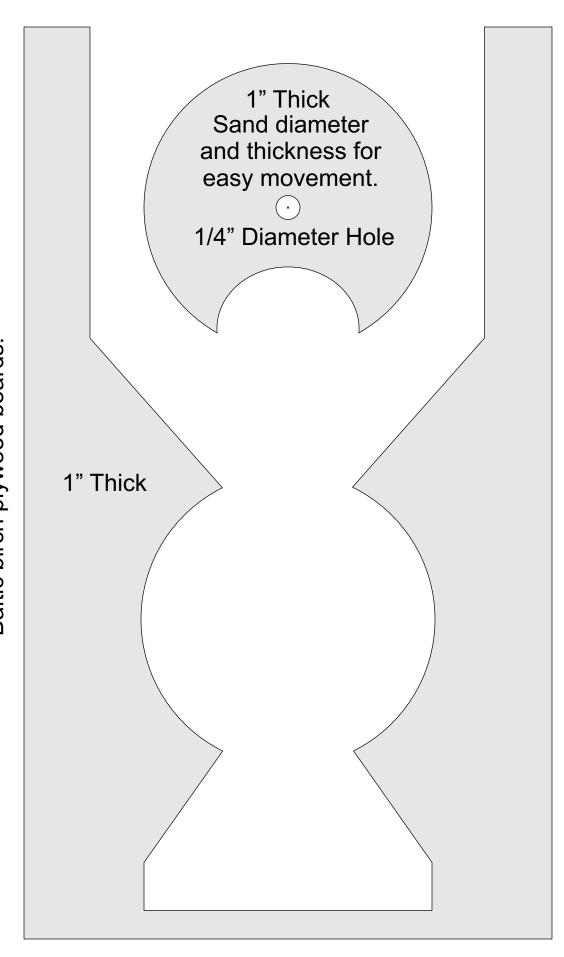


I glued up two 1/2" thick Baltic birch plywood boards.

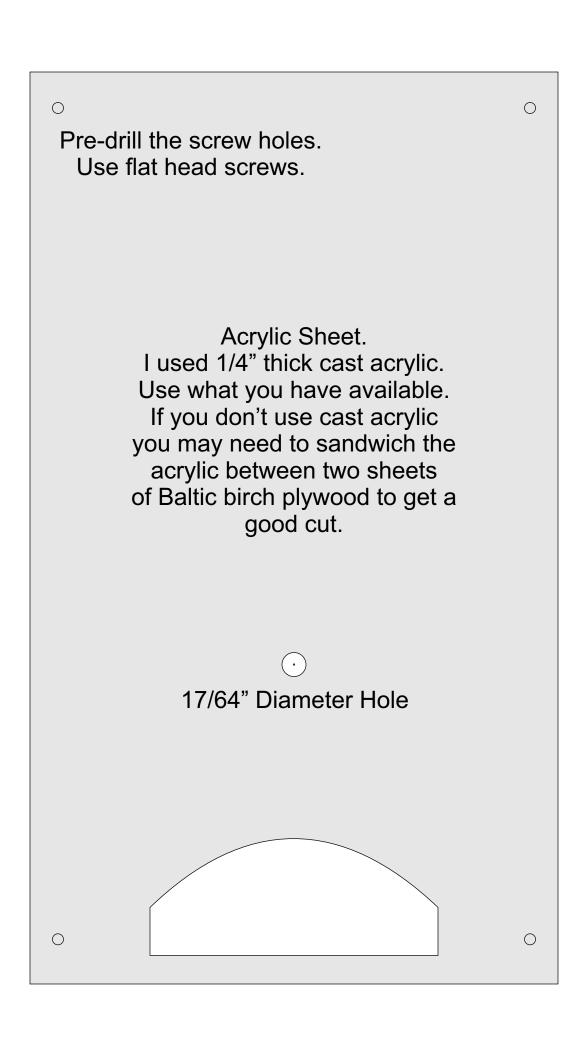

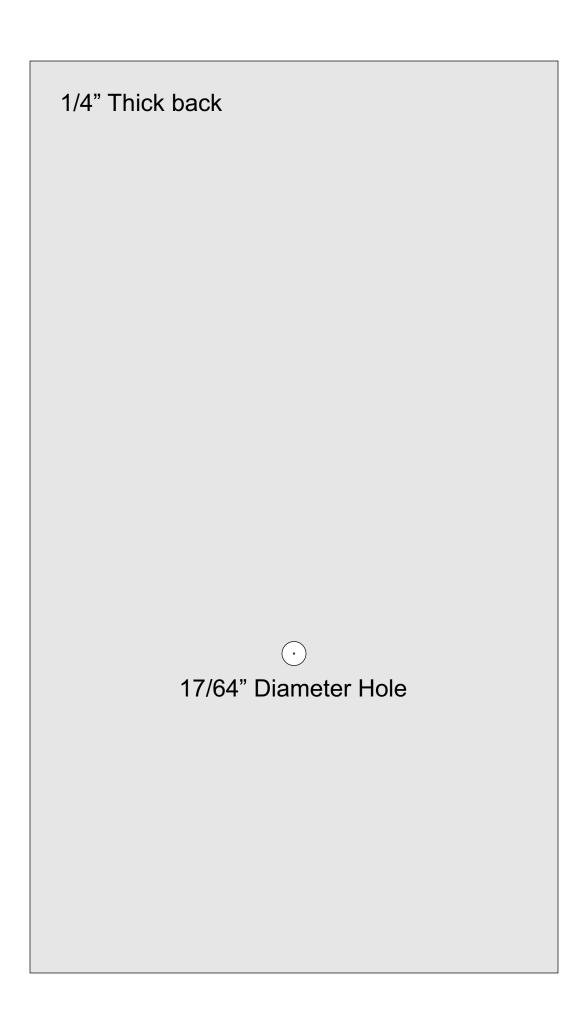

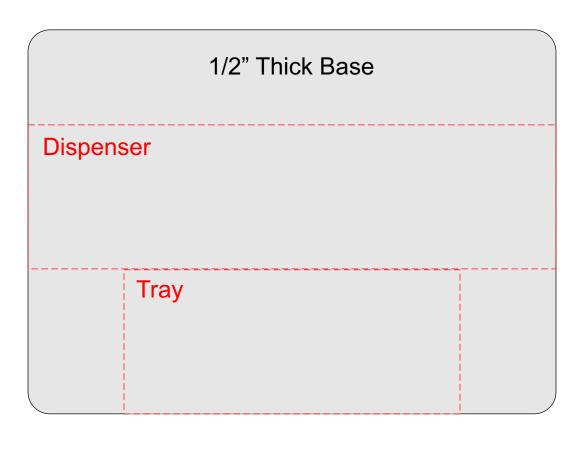



1/4" Thick

1/2" Thick